

減少電磁波影響，請妥適使用

SAR 標準值 1.6W/Kg；送測產品實測為：0.794W/Kg

本機限在不干擾合法電台與不被干擾保障條件

下於室內使用

Introduction

Congratulations on your new 3G/UMTS WX-T91 phone.

About This User Guide

This user guide is carefully designed to help you learn about your phone's features and operations quickly and effectively.

NOTICE

- We strongly recommend that you keep separate permanent written records of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, we assume no responsibility for data lost or otherwise rendered unusable, whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired or any other cause.
- We assume no responsibility, directly or indirectly, for financial losses or claims from third parties resulting from the use of this product and any of its functions, such as stolen credit card numbers, the loss or alteration of stored data, etc.
- All company and/or product names are trademarks and/or registered trademarks of their respective holders.

- Screen layout may differ from that illustrated in this user guide.
The information described in this user guide is subject to change without notice.
- All the functions described in this user guide may not be supported by all networks.
- We assume no responsibility for downloaded contents, information, etc. from the network.
- Occasionally, a few black or bright pixels may appear on the screen. Please note that this will not have any impact on any of the features or on performance.

Copyright

According to copyright laws, the reproduction, alteration and use of material which is protected by copyright (music, pictures, etc.) is only permitted for personal or private use. If the user is not in possession of more extensive copyright or has not received the explicit permission from the copyright owner to reproduce, alter or use a copy which has been made or modified in this way, this is considered to be a violation of the copyright laws and gives the copyright owner the right to claim for damages. For this reason, avoid the illegal use of material which is protected by copyright.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Powered by JBlend™ Copyright
1997-2005 Aplix Corporation. All rights
reserved.

JBlend and all JBlend-based trademarks
and logos are trademarks or registered
trademarks of Aplix Corporation in Japan
and other countries.



Powered by Mascot Capsule®/Micro3D Edition™
Mascot Capsule® is a registered trademark of HI
Corporation
©2002-2005 HI Corporation. All Rights Reserved.

Licensed by Inter Digital Technology Corporation under one
or more of the following United States Patents and/or their
domestic or foreign counterparts and other patents
pending, including U.S. Patents: 4,675,863; 4,779,262;
4,785,450; 4,811,420; 5,228,056; 5,420,896; 5,799,010;
5,166,951; 5,179,571 & 5,345,467

T9 Text Input is licensed under one or more of the following:
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480,
5,945,928, and 6,011,554; Australian Pat. No. 727539;
Canadian Pat. No. 1,331,057; United Kingdom Pat. No.
2238414B; Hong Kong Standard Pat. No. HK0940329;
Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842
463 (96927260.8) DE/DK, FI, FR, IT, NL,PT.ES,SE,GB;
Republic of Korea Pat. Nos. KR201211B1 and
KR226206B1; and additional patents are pending
worldwide.

T9 Text Input is licensed under one or more of the following:
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928,
and 6,011,554; Australian Pat. No. 727539; Canadian Pat.
No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong
Kong Standard Pat. No. HK0940329; Republic of Singapore
Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/
DK, FI, FR, IT, NL,PT.ES,SE,GB; Republic of Korea Pat.
Nos. KR201211B1 and KR226206B1; and additional
patents are pending worldwide.



miniSD™ is a trade mark of SD Card Association.

Bluetooth is a trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the
Bluetooth SIG, Inc. and any use of such marks by Sharp is
under license. Other trademarks and trade names are
those of their respective owners.



Contains Macromedia® Flash™ technology by Macromedia, Inc.
Copyright © 1995-2005 Macromedia, Inc. All rights reserved.

Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Macromedia, Inc. in the United States and other countries.



Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations ;

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501
5,506,865 5,109,390 5,511,073 5,228,054 5,535,239
5,267,261 5,544,196 5,267,262 5,568,483 5,337,338
5,600,754 5,414,796 5,657,420 5,416,797 5,659,569
5,710,784 5,778,338



BROWSER BY



OPENWAVE

CP8 PATENT

Information contained in this manual is the property of FarEasTone and Sharp.

FarEasTone and Sharp reserve the right to change product specifications without prior notice.

FarEasTone and Sharp reserve the right to change information contained in this manual without prior notice.

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA. See <http://www.mpegla.com>.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC. See <http://www.mpegla.com> for additional details.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

Useful Functions and Services

Your phone offers you the following features:

- Video Calling. You can talk while viewing each other on respective screens.
- 3D and colour Java™ games and applications with a graphic accelerator. You can also download various games and applications from FarEasTone via the mobile Internet.
- A built-in digital camera for taking pictures and video clips.
- A message function for reading and creating SMS messages.
- MMS (Multimedia Messaging Services) for personalising your phone in various ways.
- Email for sending up to 300 KB and receiving mail with attachments.
- A colour WAP browser for accessing information on the mobile Internet.
- Your own ringtones and ringvideos. You can use downloaded sound or video clip files as a ringtone or ring video clip.
- A music player that can play back MP3, AAC and AAC+ format sound files.
- Playback of the downloaded sound and video clip files.
- A voice recorder function for recording and playing back voice clips.
- A *Bluetooth*® wireless technology interface for establishing contact and transmitting data with certain devices. You can transmit pictures, sounds, and video clips to OBEX-enabled phones.
- An Infrared interface for data communication. You can transmit pictures, sounds and video clips to OBEX-enabled phones.

- A data synchronisation function for updating Phonebook entries on the Internet.
- A schedule alarm for creating and sending schedule entries with alarm settings.
- Video output. You can connect your phone to other devices, such as TVs or videos set to output, and display Java™ data, images, or video clips.
- With the built-in digital camera, you can read texts and barcodes, and create QR codes.
- A miniSD™ memory card slot that expands connectivity with a PC using the memory card.

Contents

Introduction	1	Making a Video Calling	30
Your Phone	9	Answering a Video Calling	30
Optional Accessories	9	Incall Menu (Video Calling)	31
Getting Started	10	Using the Menu	34
Inserting the SIM/USIM Card and the Battery	14	Top Menu	34
Removing the SIM/USIM Card and the Battery	15	List of Menu Functions	35
Charging the Battery	16	Entering Characters	37
Inserting the Memory Card	18	Changing the Input Language	38
Removing the Memory Card	18	Changing the Input Method	38
Connecting the Stereo Headset	19	Chinese User Dictionary	43
Turning Your Phone On and Off	19	Using Templates	45
Keypad Lock	20	Copying, Cutting and Pasting Text	45
Display Indicators (Main Display)	21	Insert Phonebook Entries	45
Opening Your Phone	23	Call Manager	46
Navigating Functions	24	Changing the List Displayed	47
Voice Call/Video Calling Functions	25	Selecting the Storage Memory	47
Making a Voice Call	25	Sorting the Phonebook List Order	47
Speed Dialling	26	Selecting the Search Mode	47
Redialling	26	Add New	47
Answering a Voice Call	26	Viewing My Card	48
Incall Menu (Voice Call)	27	Copying Phonebook Entries between SIM/ USIM Card and Handset	48
		Dialling from the Phonebook	48

Editing Phonebook Entries	49	Email	62
Assigning a Ringtone or a Ring Video Clip		Creating a New Message	62
File to Each Entry	49	Cell Broadcasts	67
Deleting Phonebook Entries	49	Area Info	68
Manage Group	50	Messaging Settings	68
Message Groups	50	FET Mobile Internet	71
Memory Status	51	Navigating a WAP Page	72
Speed Dial List	51	Browser Settings	74
Sending a Phonebook Entry	52	Media Player	75
Receiving a Phonebook Entry	52	TV & Video	75
Sending a Voice Clip Message or Video		Music Player	77
Clip Message Using an Address from the		Gallery	80
Phonebook	52	Picture Gallery	80
Camera	53	Video Gallery	81
Taking Pictures	53	Sound Gallery	82
Recording Video Clips	54	Other Documents	83
Using the Options Menu in the Viewer		Common Option Menus	83
Position of the Display	54	Text Templates	86
Common Functions in the Photo and Video		Memory Status	86
Camera Modes	55	Java™	87
Functions in the Photo Camera Mode	58	Java™ Gallery	87
Functions in the Video Camera Mode	60	Set Java™ Wallpaper	88
Messages	62	Java™ Settings	89
SMS	62	Java™ Information	90
MMS	62		

Organiser	91	Call Log	122
Calendar	91	Call Timers	122
Alarms	94	Data Counter	123
Calculator	96	Connectivity	124
Voice Recorder	97	Bluetooth	124
Scanner	97	Infrared	127
Stopwatch	99	Network Settings	127
Tasks	100	Internet Settings	128
World Clock	101	Off Line Mode	130
Countdown Timer	102	Backup/Restore	130
Expenses Memo	102	Connecting WX-T91 to Your PC	132
Phone Help	103	System Requirements	132
SIM Application	104	3G/GSM GPRS Modem	132
Settings	105	Handset Manager	133
Profiles	105	Software Installation	133
Setting the Display	109	Troubleshooting	135
Sound Settings	112	Safety Precautions and Conditions of	
Date & Time	112	Use	138
Language Setting	113	Conditions of Use	138
Call Settings	114	Environment	141
Video Calling Settings	118	Precautions Concerning Vehicle Use	141
Security	119	SAR	141
Card Settings	121	Precautions for Use in USA	142
Master Reset	121	Out of Warranty List	144
		Index	145

Your Phone

Please check the following carefully. Your phone should come complete with:

- 3G (UMTS)/GSM 900/1800/1900/GPRS phone
- Lithium-Ion Battery
- Battery Cover
- AC Charger
- Stereo Headset





Optional Accessories







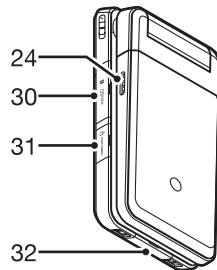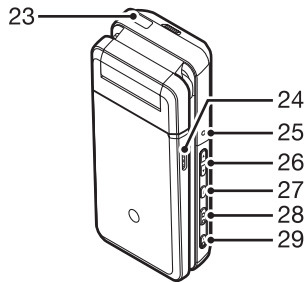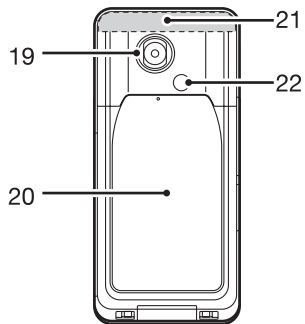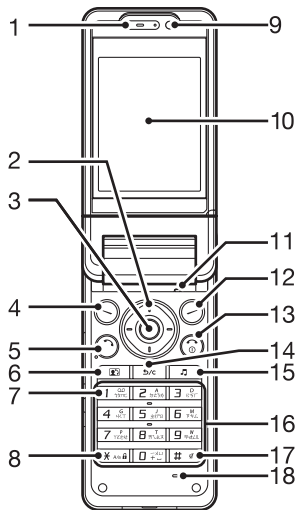

 
 
- Stereo Headset (without Microphone)
- Handsfree Microphone Unit (with Switch)
- Video Cable
- Cigarette Lighter Charger
- USB Data Cable

The above accessories may not be available in all regions.

For details, please contact your dealer.

Getting Started



1. **Earpiece**
2. **Navigation Keys (Arrow Keys):**
 -     Moves cursor to highlight a menu item, etc.
 - Up arrow key: Displays the Shortcut menu when pressed in standby.
 - Down arrow key: Displays the Phonebook entries when pressed in standby.
 - Left arrow key: Displays the list of Java™ Gallery when pressed in standby.
 - Right arrow key: Displays Gallery when pressed in standby.
3. **Centre Key:**
 -  Displays the Main menu in standby, and executes the highlighted function.
4. **Left Soft Key:**
 -  Executes the function in the lower left of the screen.
 - Displays Messaging menu in standby.
5. **Send/Redial Key:**
 -  Makes or accepts calls, displays the call logs in standby.
6. **Video Calling Key:**
 -  Makes or accepts Video Callings, and displays the call logs in standby.
7. **Voice Mail Key:**
 -  Long press to connect to the Voice Mail centre. (Depending on the SIM/USIM card.)
8. *** /Shift Key:**
 -  Switches character input method as follows on the text entry screen.
 - In English mode: Abc, ABC, abc and 123. In T9 mode, T9 Abc, T9 ABC, T9 abc and 123.
 - In traditional Chinese mode: Abc, ABC, abc, 123, T9 BoPoMoFo, and T9 Stroke.
 - Press to enter P, ?, – or * in standby.
 - Long press in standby to lock the keypad.
9. **Sub Camera (Internal Camera)**
10. **Main Display**
11. **Microphone (for the viewer position of the display)**

12. Right Soft Key:



Executes the function in the lower right of the screen.

Shortcut to “FET Mobile Internet” by opening the browser. Press in standby.

13. End/Power Key:



Ends a call and turns power on/off.

14. Clear/Back Key:



Clears the characters before the cursor, returns to the previous screen, etc.

15. Music Key:



Displays Music menu in standby.

16. Keypad

17. #/Silent Key:



Displays symbols screen on the text entry screen.

Long press to switch languages on the text entry screen.

Turns the flash/auxiliary light on or off in camera mode.

Long press in standby to switch Profiles settings between the mode most recently activated and Silent mode.

18. Microphone

19. Camera (External Camera)

20. Battery Cover

21. Built-in Aerial:

Warning: Do not cover the top of the phone with your hand when in use as this may interfere with the performance of the built-in aerial.

22. Mobile Light:

Used as a flash or an auxiliary light in camera mode.

23. Infrared Port:

Sends and receives data via infrared.

24. Stereo Speakers

25. Small Light:

Used as a battery charge indicator, Event Light and Status Light.

26. Side Keys (/):

(These two keys work in reverse with the viewer position of the display.)
Moves the highlight up or down.

Press in standby or during a call to increase or decrease the earpiece volume.

27. Menu Key:



Executes the function in the lower left of the screen in the viewer position of the display.

28. Camera Key:





Displays the Main menu when pressed in standby, then executes a highlighted function in the viewer position of the display.

Long press to activate the camera.

Press during an incoming call alert to answer the call in the viewer position of the display.

29. Cancel Key:



Executes the function in the lower right of the screen in the viewer position of the display. Long press in standby to turn the mobile light on. You can change the light colours by pressing  or  when the mobile light is on.

Long press to reject an incoming call.

Press during an incoming call alert to send a busy tone to the caller in the viewer position of the display.

Press to end the call in the viewer position of the display.

30. Memory Card Slot Cover


31. VIDEO OUT/Stereo Headset Connector

32. External Connector:


Used to connect either the charger or a USB data cable.

Inserting the SIM/USIM Card and the Battery


1. Slide off the battery cover (① ②).

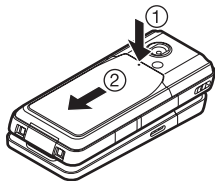

2. Slide the SIM/USIM card into the SIM/USIM holder.

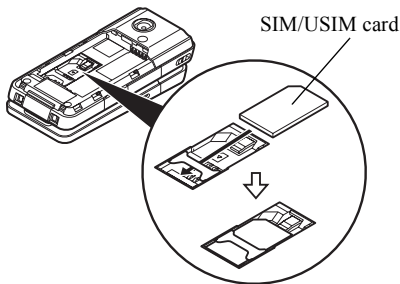

3. Hold the battery so that the metal contacts of the battery are facing down, slide the guides on the top of the battery into the battery slot (③), and then insert it (④).

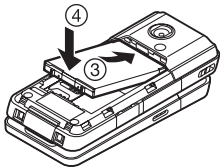


4. Replace the battery cover.

Note

- Make sure that only 3V SIM/USIM cards are used.
- Make sure that the standard accessory battery is used.

Removing the SIM/USIM Card and the Battery

1. Ensure that the phone is turned off and that the charger and other accessories are disconnected. Slide off the battery cover.
2. Lift the battery using the protruding edge and remove the battery from the phone.
3. Hold ① down gently while sliding the SIM/USIM card out of the SIM/USIM holder (②).

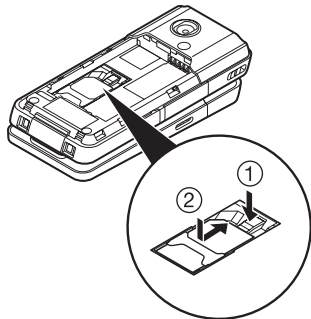

Battery Disposal

The device is battery-powered. In order to protect the environment, please read the following points concerning battery disposal:

- Take the used battery to your local waste depot, dealer or customer service centre for recycling.
- Do not expose the used battery to a naked flame, immerse in water or dispose with the household waste.




廢電池請回收

Charging the Battery

Using the Charger

1. Open the cover of the external connector, connect the charger to the external socket located at the bottom of the phone by pressing both sides indicated with arrows, and connect to an AC outlet.

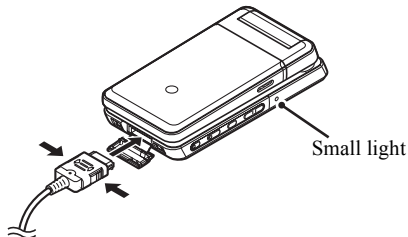

The small light turns on.

Standard charging time: Approx. 140 minutes

Note

- When you purchase this phone, the battery may not be fully charged.
- Charging time may vary depending on the state of the battery and other conditions. (See “Battery” on page 139.)

To Disconnect the Charger

When charging is complete, the small light turns off.

1. Unplug the charger from the AC outlet, then unplug the charger connector from the phone.
2. Close the cover.

Note

- *Do not use any non-approved chargers as they may damage your phone and invalidate any warranties, see “Battery” on page 139 for details.*

IMPORTANT SAFETY INSTRUCTIONS — SAVE THIS INSTRUCTION DANGER — TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THIS INSTRUCTION

If the shape and size of the plug do not match the power socket, use a plug adapter that matches.


To Charge Using the Cigarette Lighter Charger

The optional cigarette lighter charger supplies power for charging from the cigarette lighter socket of a car.





Battery Level Indicator

The current battery level is displayed in the upper right of the main display.

Low Battery during Use


When the battery is running low, an alarm will sound and “” is displayed on the main display.

If you are using your phone and you hear the low battery alarm, attach your charger as soon as possible. The phone may not be able to continue normal operation if you continue to use it.

Battery Indicators	Charge Level
	Sufficiently charged
	Charging recommended
	Charging required
	Empty

Inserting the Memory Card

1. Turn off the phone.
2. Open the memory card slot cover and insert the card with the label side facing up.
3. Insert the memory card all the way in until it clicks.

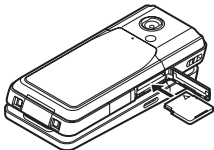





4. Close the cover.

Note

- Make sure that the phone is turned off before inserting the memory card.
- Be sure to insert the card in the correct direction and orientation.
- Do not open the memory card cover while the memory card is being formatted or written to. The card may be damaged beyond use.
- Keep all memory cards out of the reach of small children.

Tip

- You see the following indicators when the memory card is in use:
 - : Appears when the card is inserted.
 - : Appears when the card is damaged or unusable.
 - : Appears when the card is being written or read.
 - : Appears when the card is being formatted.

Removing the Memory Card


1. Open the memory card slot cover and slightly push the card so it pops out. Remove the card and close the cover.

Note


- Make sure that the phone is turned off before removing the memory card.
- Do not remove the memory card while the memory card is being formatted or written to.

Connecting the Stereo Headset

1. Open the cover of the Stereo Headset Connector.
2. Connect the Stereo Headset.

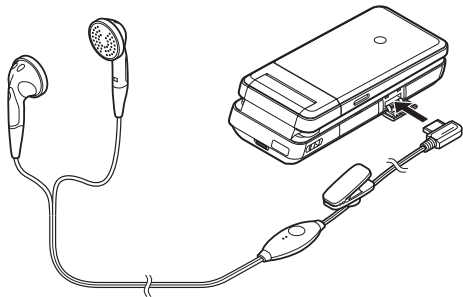

Turning Your Phone On and Off

To turn the power on, long press  for approximately 2 seconds.

To Enter the PIN Code

If activated you are asked to enter a PIN (Personal Identification Number) code and handset lock code after turning on your phone.

1. Enter your PIN code.

The PIN code is 4 to 8 digits.

2. Press .

Note

- If your PIN code is entered incorrectly three times in a row, the SIM/USIM card is locked. See “Enabling/Disabling the PIN Code” on page 119.
- If the clock settings have not been entered, the date and time entry screen is displayed (p. 112).

To Copy All Phonebook Entries from the SIM/USIM Card

When you insert the SIM/USIM card into your phone for the first time and start the Phonebook application, you are asked whether you wish to copy Phonebook entries on the SIM/USIM card. Follow the on-screen instructions, or you can do it later using the Phonebook menu as follows:



“Call Manager” → “Advanced” → “Copy All Entries”

1. Select “From SIM to Handset”.

Keypad Lock

You can lock the keypad to prevent it from being pressed accidentally.


Locking the Keypad

1. Long press  in standby.
To unlock, long press .

Tip

- *Emergency numbers (112, etc.) can be entered and dialled regardless of the keypad lock.*

Display Indicators (Main Display)

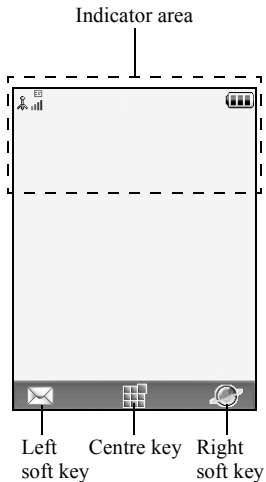

1. : Strength of received signal/Service out of range
 : 3G (UMTS)/GPRS
 : GSM/GPRS
 : Roaming outside network
2. : Off Line Mode [enabled]
3. : Data exchange with external device
4. : Connection to the server [established/communicating]
5. : Memory card inserted
6. : Voice call [incoming/in progress]
7. : Video calling communication mode enabled [voice and video/voice/video]
8. : Diverts set to "Voice calls" of "All Calls"
9. : Secure WAP page displayed
10. : Alerts [text message/multimedia message/Email]


11. / / / / / :
 Connection status
 [USB working/IrDA standby/IrDA working/*Bluetooth* standby/*Bluetooth* working/Talking with the *Bluetooth* headset]
12. / : Java™ application [executed (colour)/suspended (grey)]
13. (No display) / / / / / :
 Current profile [Normal/Meeting/Activity/Car/Headset/Silent]
14. / / / / :
 Silent/vibration setting [silent/increasing volume/vibration enabled/silent and vibration enabled/increasing volume and vibration enabled]
15. / / : Speaker mode [speaker phone/speaker activated/microphone muted]
16. : Battery level
17. : Daily alarm enabled
18. / : Schedule entry enabled [with/without reminder alarm]
19. : Outbox contains unsent messages [text message/multimedia/email]
20. : WAP alert
21. : Voice mail message alert
22. : Connection status [1st IrDA communication [enabled/exchanging information]]
23. : Phone Lock enabled
24. : Keypad Lock enabled
25. / (blank): IrDA setting [enabled/disabled]
26. **Abc** / : Phonebook Search Mode

Opening Your Phone

Your phone can be opened in the following three positions: normal, self-portrait and viewer positions.


Normal Position (①)

1. Open the phone until the display stops as illustrated.

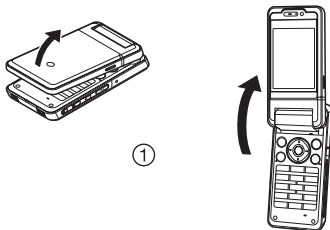

Self-portrait Position (②)

2. Turn the display 180° clockwise.

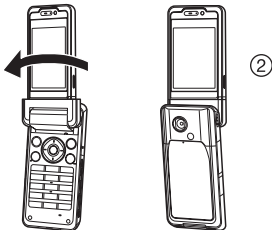

Use this position to take a self-portrait with the external camera.



Do not turn the display anticlockwise as this may damage it.

Viewer Position (③)

3. Close the main display toward the keypad.



Note

- Operations of  and  are reversed in the viewer position of the display.
- Keypad operations cannot be performed in the viewer position of the display.
- Be careful not to carry the phone in the viewer position of the display as this may damage the display.

Navigating Functions

All applications are accessed from the Main menu. To open the Main menu, press the centre key (●) in standby.

To launch applications, you will need to highlight menu items, and make selections. To select a menu item (indicated in quotation marks), move the cursor using ▲, ▼, ● and ▶, and press ● to select.

In certain procedures, you will need to press one of the soft keys (indicated in square brackets), which are displayed in the lower left and right of the screen. Press the corresponding soft key (☺ or ☻).

To return to the previous screen, press the right soft key if it displays *Back*. To close the Main menu, press the right soft key if it displays *Exit*.

Each section in this user guide starts with a list of items you will need to select in order (indicated in italics) before performing the procedures shown. Select each item to reveal the next set of items that you have to select. Open subsection items after opening those listed in the main section.

Example:

“*Call Manager*” → “*Phonebook*” → “*Add New*”

Using in the Viewer Position of the Display

Available keys in viewer position of the display are ▲, ▼, ☺, ☻ and ●.

To open the Main menu, press ● in standby.

To select a menu item (indicated in quotation marks), press ▲ or ▼, and press ● to select.

In certain procedures, you will need to press one of the soft keys (indicated in square brackets), which are displayed in the lower left and right of the screen. The left soft key is ☺ and the right soft key is ☻.

The side keys function in camera mode as follows:

▲/▼: Zoom-in/Zoom-out


☺: Options

 
●: Capture

☻: Switches between the photo camera and video camera modes.


Voice Call/Video Calling Functions

Making a Voice Call

1. Enter the area code and the phone number you wish to dial and press  to dial.

If you enter the wrong number, press  to delete the number to the left of the cursor.

 
Emergency Calls


1. Enter 112, 911 or 999 (international emergency number) using the keypad and press  to dial.

Note

- *Emergency calls may not be able to be made on all mobile phone networks when certain network services and/or phone features are in use. Contact your service provider for more information.*
- *This emergency number can normally be used to make an emergency call in any country, with or without a SIM/USIM card inserted, if a 3G (UMTS)/GSM network is within range.*

International Calls

1. Long press  until a + (international dialing prefix) sign is displayed.

2. Enter the country code, followed by the area code (without the leading zero) and the phone number, and press  to dial.

Adding an Entered Phone Number to the Phonebook



1. After entering a phone number, press [Options] and select “Save Number”.

For details on creating a new entry, see “Add New” on page 47.

 
 
 
Showing or Hiding My Phone Number on the Display of the Called Party

1. After entering a phone number, press [Options] and select “Show My ID” or “Hide My ID”.

 

Making a Call Using the Phonebook in the Viewer Position of the Display

1. Press .
2. Select “Call Manager”.
3. Select “Phonebook”.
4. Select the entry you wish to call.
5. Select the phone number.
6. Select “Call” to dial.
To end a call, press .

Speed Dialling

Up to 8 phone numbers from the Phonebook memory (Handset and SIM/USIM) can be assigned to speed dials. You can call the numbers using the digit keys (1  to 9 ). The phone number of the Voicemail centre is assigned to 1 .





For details on setting the speed dial list, see “Speed Dial List” on page 51.

1. To dial a number using the speed dial, long press any of the digit keys (1  to 9 .

The phone number saved in the speed dial list is dialled.


Redialling

 
 
You can redial numbers in the call log. Select from specific categories or “All Calls”. Specific categories contain up to 30 numbers and the “All Calls” list contains up to 90.

1. Press  in standby.
2. Select the category from “All Calls”, “Dialled Numbers”, “Missed Calls” or “Received Calls”.
To switch logs, press  or .
3. Highlight the phone number you wish to call.
4. Press  to redial the call.

Answering a Voice Call

When an incoming call is detected, the phone rings.





1. Press  or [Answer] to answer the call.

Or press any key (except ,  and [Busy]) when the “Any Key Answer” function is enabled. Set the Any Key Answer function in the profile of each mode (p. 109).


Tip

- If you have subscribed to the Calling Line Identification (CLI) service and the caller’s network sends the number, the caller’s number is displayed on the screen. If the caller’s name and number are saved in the Phonebook, the caller’s name and phone number are displayed on the screen.
- If the number is a restricted number, the display shows “Withheld”.
- When you receive a call from the person whose picture is registered in the Phonebook, the picture, name and phone number are displayed.

Answering a Call in the Viewer Position of the Display

1. Press  or  to answer the call.
To end a call, press .
To reject the incoming call, long press .

Rejecting an Incoming Call

1. Press  while the phone is ringing to reject a call you do not wish to answer.

Letting the Caller Know You are Unavailable








 
1. Press [Busy] while the phone is ringing to send a busy tone to the caller.


Incall Menu (Voice Call)

Your phone has additional functions available while a call is in progress.





Adjusting the Earpiece Volume

During a call, you can adjust the earpiece volume (and Stereo Headset volume, if connected).

1. Press  or  to display the Earpiece Volume screen.
2. Press  (or /) to increase the volume of the call or press  (or /) to decrease the volume.

3. Press  when the volume is set to the desired level.

Tip

- In the viewer position of the display, press  or  to display the incall menu.
- In the viewer position of the display, use  or  to increase or decrease the earpiece volume. Operations of these keys are reversed in the viewer position.

Turning the Speaker On and Off


You can talk via the loudspeaker on the back of the phone by turning it on.

1. During a call, press [Options] and select “Loudspeaker On”.

Putting a Call on Hold

This function allows you to manage two calls at the same time. If you wish to make another call while you are talking to someone, you can put the current call on hold to call someone else.

To Make Another Call during a Call

1. During a call, press [Options] and select “Hold”.
The current call is put on hold.
2. Press [Options] and select “Dial New Number”.
3. Enter the phone number you wish to make another call to, then press .

Tip

- You can also make another call by entering the phone number during a call instead of step 1. The current call is automatically put on hold.

Accessing SMS/MMS Menu during a Call

1. During a call, press [Options] and select “Messages”.

The following options are available: “Create Message” to make an SMS and MMS, or “Inbox”, “Sent” or “Drafts” to access these folders. For details on SMS, see “SMS” and “MMS” on page 62.

Call Waiting

This service notifies you of another incoming call while you have a call in progress.

1. During a call, press [Options] and select “Hold & Answer” to answer the second call.

The first call is put on hold and you can now talk to the second caller.

Note


- You need to set “Call Waiting” to “On” if you use the Call Waiting service (p. 115).
- Call Waiting service may not be available on all networks. Contact your network operator for more information.
- If you do not wish to answer the second call, press [Options] and select “Busy” in step 1. If “Reject” is selected, the log of the second call is saved as a missed call.

Conference Call

Conference call is a call with more than 2 participants. You may include up to 5 participants in a conference call.

To Make a Conference Call


You must have one active call and one held call.

1. During a call, press [Options] and select “Multi Party”.
2. Select “Conference All” to join the conference call.
3. Press  to end the conference call.

Note

- *The conference call service may not be available on all networks. Contact your network operator for more information.*
- *You have more options for the Conference call in step 2:*
 - *To put all participants on hold, select “Hold All”.*
 - *To put all participants except the current call on hold, select “Private”.*
 - *To end the call with all participants, select “End Active Call(s)” or “End Held Call(s)”.*
 - *To reject adding more participants to the current party, press [Options] and select “Reject”, or you can send the busy tone by selecting “Busy”.*

To Add New Participants to the Conference Call

1. Press [Options] and select “Dial New Number”.
2. Enter the number you wish to include in the conference call and press  to dial.

3. Press [Options] and select “Multi Party”.
4. Select “Conference All” to join the conference call.
If you wish to add other participants, repeat steps 1 to 4.

To End the Call with a Conference Call Participant

1. During a conference call, highlight the person that you wish to disconnect from the conference call.
2. Press [Options] and select “End This Call”.

To Have a Private Conversation with One of the Participants

If you wish to have a private conversation with one of the participants, you may select the participant from the conference list and put the other participants on hold.

1. During a conference call, select the person that you wish to talk to.
2. Press [Options] and select “Multi Party”.
3. Select “Private”.
4. Once you have finished the private conversation, press [Options] and select “Multi Party”.
5. Select “Conference All” to return to the conference call.

Muting the Microphone


1. During a call, press [Mute].
To unmute the microphone, press [Unmute].

 
Making a Video Calling

Note

- Use this function with only the video calling enabled phones.
- Make sure that the battery is fully charged and the signal is strong before using this function.
- Turn the loudspeaker on or use a switch-equipped Stereo Headset so that you can talk while looking at the video calling screen on the main display.


Making a Video Calling

1. Enter the area code and the phone number you wish to dial and press , or press [Options] and select “Video Calling” to dial.

If you enter the wrong number, press  to delete the number to the left of the cursor.




When the line is connected, the image of the called party is displayed upper on the screen, and yours lower left.

Tip

- If the called party's phone is not video calling enabled, you can press  and enter the phone number again to make a voice call.

Answering a Video Calling


When an incoming call is detected, the phone rings.

1. Press  or  to answer the video calling or press  [Answer] to select “Hide Picture”, “Show Picture”, “Reject Call” or “Busy”.

Tip

- If you have subscribed to the Calling Line Identification (CLI) service and the caller's network sends the number, the caller's number is displayed on the screen. If the caller's name and number are saved in the Phonebook, the caller's name and phone number are displayed on the screen.

Rejecting an Incoming Call

1. Press  while the phone is ringing to reject a call you do not wish to answer.

Letting the Caller Know You are Unavailable

1. Press [Busy] while the phone is ringing to send a busy tone to the caller.

Incall Menu (Video Calling)

Muting the Microphone

1. During a video calling, press [Mute].
To unmute the microphone, press [Unmute].

Switching Images

You can switch images between the main and sub screens.

1. During a video calling, press [Options] and select “Switch Images”.



Tip

- You can also switch images between the main and sub screens by pressing  during a video calling.

Changing the Image of Yourself



1. During a video calling, press [Options] and select “Camera Picture”.
2. Select “Internal Camera”, “External Camera” or “Alternative Image”.
“Internal Camera”: The image through the internal camera is displayed and sent to the party.
“External Camera”: The image through the external camera is displayed and sent to the party.
“Alternative Image”: The camera is turned off and the image selected in “Alternative Image” of “Video Calling Settings” (p. 118) is used.

Tip

- You can also switch the image shown to the caller by pressing  or  during a video calling.

Using the Optical Zoom Function

The optical zoom enables you to zoom the picture more clearly by the actual zooming action of the optical lens. The optical zoom is used up to the [×2] zooming ratio. If the zoom exceeds [×2], the digital zoom is used to further magnify.

1. During a video calling, press [Options] and select “Enable Opt. Zoom”.
2. Press  or .

Turning the Speaker On and Off

You can talk via the loudspeaker on the back of the phone by turning it on.

1. During a video calling, press [Options] and select “Loudspeaker On”.

Note

- In a high-noise environment, you may not be able to continue a call, or make a clear call. We recommend that you use the Stereo Headset.
- With this option, you may not be able to continue a call without interruption if you increase the earpiece volume. We recommend that you decrease the earpiece volume or use the Stereo Headset.

Video Calling Settings

To Change the Quality of the Incoming Image

You can adjust the quality of the called party’s image.

1. During a video calling, press [Options] and select “Video Calling Settings”.
2. Select “Incoming Picture Quality”.
3. Select “Normal”, “Quality Priority” or “Frame Rate Priority”.

“Normal”:	The standard quality is used.
“Quality Priority”:	The quality of the picture takes precedence over the frame rate.
“Frame Rate Priority”:	The frame rate takes precedence over the quality.

To Turn the Backlight On or Off

You can turn on the backlight of your screen.



1. During a video calling, press [Options] and select “Video Calling Settings”.
2. Select “Backlight”.

3. Select “Always On”, “Always Off” or “As Normal Setting”.

When “Always On” is selected, the backlight will always be on during a video calling.

When “As Normal Setting” is selected, the backlight will time out depending on the Backlight setting (p. 110).

To Adjust the Video Exposure

1. During a video calling, press [Options] and select “Video Calling Settings”.
2. Select “Exposure”.
3. Press  (Bright) or  (Dark).

Mirror Image

During a video calling, you can reverse your image on the sub screen.

1. During a video calling, press [Options] and select “Video Calling Settings”.
2. Select “Mirror Image”.
3. Select “On” or “Off”.


To Change the Sub Camera Image to the Alternative Image

During a video calling, you can switch the image shown to the caller between the sub camera image and an alternative image or display an image while putting a call on hold from the saved picture files.

1. During a video calling, press [Options] and select “Video Calling Settings”.
2. Select “Alternative Image” or “Hold Guidance Picture”.
3. Select “Preset Picture” or “Picture Gallery”.

Using the Menu

Top Menu

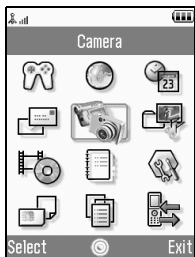

1. Press in standby.
The Main menu is displayed.
2. Press , , or to highlight the desired menu, then press to access the function.
The sub menu is displayed.
For details on the menu options, see “List of Menu Functions” on page 35.

Using the Menu in the Viewer Position of the Display

1. Set the phone in the viewer position of the display.
 2. Press to display the Main menu.
 3. Press or to move the cursor up or down, then press or .
- Press to return to the Main menu.
- The cursor moves the same as in the normal position of the display by using and .
- For details on the functions of these keys, see page 13.

List of Menu Functions


Menu No./Main Menu	Menu No./Sub Menu1
1 Java™	1 Java™ Gallery 2 Set Java™ Wallpaper 3 Java™ Settings 4 Java™ Information
2 FET Mobile Internet	1 Homepage 2 Go to URL 3 Bookmarks 4 Alert Inbox 5 My Saved Page 6 Access History 7 Browser Settings 8 Music & Picture 9 Community 10 Game 11 Fortune Telling 12 MMS Show
3 Organiser	1 Calendar 2 Alarms 3 Calculator 4 Voice Recorder 5 Scanner 6 Stopwatch 7 Tasks 8 World Clock 9 Countdown Timer 10 Expenses Memo 11 Phone Help

Menu No./Main Menu	Menu No./Sub Menu1
4 Messages	1 Create Message 2 Inbox 3 Alert Inbox 4 Drafts 5 Templates 6 Sent 7 Outbox 8 Voice Mail 9 Cell Broadcasts 10 Area Info 11 Messaging Settings 12 Memory Status
5 Camera	
6 Gallery	1 Picture Gallery 2 Video Gallery 3 SD VIDEO 4 Sound Gallery 5 Java™ Gallery 6 Text Templates 7 Other Documents 8 Memory Status
7 Media Player	1 TV & Video 2 Music Player

Menu No./Main Menu	Menu No./Sub Menu1
8 Call Manager	1 Phonebook 2 Manage Group 3 Speed Dial List 4 My Card 5 Message Groups 6 Phonebook Settings 7 Advanced
9 Settings	1 Profiles 2 Display Settings 3 Sound Settings 4 Date & Time 5 Language 6 Call Settings 7 Video Calling Settings 8 Security Settings 9 Card Settings 10 Master Reset
10 SIM Application	
11 Call Log	1 All Calls 2 Dialed Numbers 3 Missed Calls 4 Received Calls 5 Call Timers 6 Call Costs 7 Data Counter
12 Connectivity	1 Bluetooth 2 Infrared 3 Network Settings 4 Internet Settings 5 Off Line Mode 6 Backup/Restore

Entering Characters

 

 
 
 
 
 
When entering characters to create Phonebook entries, SMS or MMS, etc., press the corresponding keys.


 
 
 
 
In multi-tap input method, press each key until the desired character is displayed. For example, press  once for the letter “A” or twice for the letter “B”.



Multi-tap Mode

 
Pressing each key scrolls characters in the following order.

 
Multi-tap Mode keys

 
Key	Upper Case Characters	Lower Case Characters	Numeric
	. (full-stop) , (comma) ? ! : ; ' (apostrophe) " / 1		1
	ABC2	abc2	2
	DEF3	def3	3
	GHI4	ghi4	4
	JKL5	jkl5	5
	MNO6	mno6	6
	PQRS7	pqrs7	7

Key	Upper Case Characters	Lower Case Characters	Numeric
	TUV8	tuv8	8
	WXYZ9	wxyz9	9
	(space)+ = < > € £ \$ ¥ % & 0		0
	Switches character case among four modes: Abc, ABC, 123 and abc.		
	. , ? ! : ; ' " [SP] _ @ / \ # * = ^ ` ~ i (< [\$ £ ¥ € § ß -) >] Ä Å Æ Ü ü ù + { ä å æ à Ç É è é & } ï ñ Ñ Ö Ø ö ø ò ~ Δ Φ Γ Λ Ω Π Ψ Σ Θ % ≡ □		

 -  : Long press to enter 1 - 9 numbers.

 : Long press to enter space in Numeric mode or to enter 0 in other modes.

 : Long press to shift between multi-tap and T9 mode.

 : Long press to display the Input Language screen.

Changing the Input Language


1. On the text entry screen, press [Options].
2. Select “Input Language”.
3. Select the desired language.

Changing the Input Method

 
1. On the text entry screen, press [Options].
2. Select “Input Method”.
3. Select the input method you wish to use.

Input Method	Input Language = English	Input Language = Traditional Chinese
T9 Mode	T9 Abc T9 ABC T9 abc	T9 Stroke T9 BoPoMoFo
Multi-tap mode	Abc ABC abc Numeric	Abc ABC abc Numeric
Others	Symbol Table	Symbol Table

 
Tip

- In T9 or multi-tap mode, you can switch input mode as follows by pressing .

 
English/T9 mode



English/Multi-tap mode







Traditional Chinese/T9 mode



 
T9 English Mode

Using T9 English Mode

T9 text input method is a shortcut to enter text easily and quickly.

1. On the text entry screen, press [Options].
2. Select “Input Method”.
3. Select the T9 mode (T9 Abc, T9 ABC, T9 abc) you wish to change. “T9” is displayed on the main display.
4. Press the keys to enter characters.
5. Press  or  to select the word you wish to input.
6. If you wish to clear the word, highlight it and long press .
7. Press  or select [Options] and “Done” to complete the selection.

Tip

- If you press  instead of step 6, a space is inserted next to the selected word.

User Dictionary

You can create your own English words for T9 Alphabet text input.

Note

- This function is only available when “Input Language” is set to “English”.

1. On the text entry screen in T9 mode, press [Options] and select “User Dictionary”.
2. Select “Add New Word” and enter a new word.

To edit a word in the list

1. On the text entry screen in T9 mode, press [Options] and select “User Dictionary”.
2. Highlight the desired word.
3. Press [Options] and select “Edit”.
4. Modify the word.

T9 BoPoMoFo and T9 Stroke Mode

In T9 BoPoMoFo and T9 Stroke mode, keys are as follows.

T9 BoPoMoFo and T9 Stroke Mode keys

Key	BoPoMoFo	Stroke
1 <small>QD ㄑㄨㄊㄩ</small>	ㄑㄨㄊㄩ	一
2 <small>A ㄉㄤㄨㄛ</small>	ㄉㄤㄨㄛ	丨
3 <small>D ㄍㄨㄥ</small>	ㄍㄨㄥ	丿
4 <small>G ㄏㄨㄥ</small>	ㄏㄨㄥ	㇇
5 <small>J ㄉㄤㄨㄛ</small>	ㄉㄤㄨㄛ	➔
6 <small>M ㄉㄤㄨㄛ</small>	ㄉㄤㄨㄛ	Wildcard
7 <small>P ㄩㄛㄙㄝ</small>	ㄩㄛㄙㄝ	
8 <small>T ㄉㄤㄨㄛ</small>	ㄉㄤㄨㄛ	
9 <small>W ㄉㄤㄨㄛ</small>	ㄉㄤㄨㄛ	
✕ <small>A/a ㄏ</small>	- / ˊ ˋ ˌ ˎ ˏ	
0 <small>ㄨㄛㄙㄝ ㄩㄛ</small>	ㄨㄛㄙㄝ	Space
# <small>ㄏ</small>	Go to the FullWidth Symbols screen.	

1 QD
ㄑㄨㄊㄩ - **9** W
ㄉㄤㄨㄛ: Long press to input corresponding Chinese character displayed in the candidate field.


✕ A/a ㄏ: Press to change the input method. Long press to enter tones “- / ˊ ˋ ˌ ˎ ˏ” in T9 BoPoMoFo mode.

ㄏ: Press to display the FullWidth Symbols screen. Long press to display the Input Language screen.

Changing the Input Method between Stroke and BoPoMoFo

See “Changing the Input Method” on page 38.

Using BoPoMoFo Input Mode

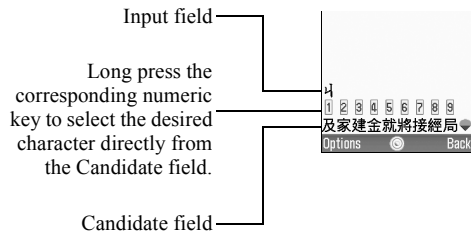

The following is an example of entering “節” for “節日歡樂”.


1. Press **4**, **0**, and **7** (2 times quickly) to enter reading. The candidates with the same reading are displayed in the Candidate field.
2. Long press **5** if the desired character is displayed.



3. Repeat steps 1 and 2 to complete messages.

Tip

- When the cursor is placed after the first character, the Candidate field displays characters most likely to follow.
- If you want to use tone options, long press **[x aā]** instead of step 2 to display the desired character. The tone symbols are displayed in the Candidate field. The candidates are displayed. Press the corresponding numeric key (**[2 ㄤ]**).

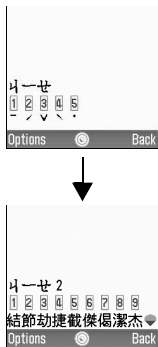


Using Stroke Mode

The following is an example of entering “節”.

1. Change the input mode to T9 Stroke mode.



2. Press **[3 ㄨ]**, **[1 ㄟ]**, **[4 ㄥ]** to display the corresponding stroke for “節”.

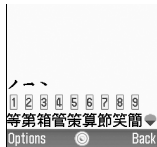

3. Long press **[7 ㄥ]** to complete the selection.

Chinese User Dictionary

You can create your own word list for T9 traditional Chinese input.

You can enter Chinese characters, alphabet, symbols and numbers.

Note

- *This function is only available when “Input Language” is set to “Traditional Chinese”.*

Creating a New Entry

1. On the text entry screen, press [Options] and select “Chinese User Dictionary”.
2. Select “Add New Word”.
3. Enter new word.

Editing a Word in the List

1. On the text entry screen, press [Options] and select “Chinese User Dictionary”.
2. Highlight the desired word.
3. Press [Options] and select “Edit”.
4. Modify the entry word.

Deleting a Word

1. On the text entry screen, press [Options] and select “Chinese User Dictionary”.
2. Highlight the desired word.
3. Press [Options] and select “Delete”.
4. Press [Yes] or [No].

Finding an Entry

You can recall Chinese word entries by entering the first few characters.

The following is an example from the Chinese User Dictionary.

Please notice the word **四川牛肉飯☆** is already stored at this example.

1. Press **6** (3 times quickly), then long press **1** and enter “四”.

This example is using BoPoMoFo mode

2. The character “川” appears at **9**.

Normally “萬” appears here.



3. Long press **9** and enter “川”.



4. Long press **9**, then the following characters appear.



Note

- This function doesn't appear, if the entry word was made by less than 4 letters or no Chinese characters included.

Though, you can use this as a shortcut if the word was created by Chinese character, since candidate character appears at **9** so you only have to press **9** without searching for following characters.

- If there were a stored word which shares the first 1-4 character such as “四時半”, candidate “時” appears at **8** or **9**.

The latest entry comes to **9**, and if there were three or more entry starts with “四”, old candidate disappears.

- If there were a stored word which shares the first 5 or more characters, such as “四川牛肉飯辛”, after “飯” was entered, the latest character of entry completes.



Using Templates

You can use the sentences registered in Text Templates when entering characters.

For details on creating the text template, see “Adding Phrases to Text Templates” on page 86.

1. On the text entry screen, move the cursor to the point you wish to insert the template.
2. Press [Options] and select “Advanced”.
3. Select “Insert Template”.
4. Select the desired text template.
The selected text template is inserted.

Copying, Cutting and Pasting Text

1. On the text entry screen, press [Options] and select “Advanced”.
2. Select “Copy” or “Cut”.
3. Move the cursor to the first letter to be copied or to be cut, then press .
4. Move the cursor to the last letter to highlight the area, then press .
5. Move the cursor to the point you wish to paste the letters.

6. Press [Options] and select “Advanced”.
7. Select “Paste”.

Insert Phonebook Entries

You can insert the entries registered in Phonebook when entering characters.

For details on creating the Phonebook entries, see “Call Manager” on page 46.

1. On the text entry screen, move the cursor to the point you wish to insert the Phonebook Entry.
2. Press [Options] and select “Advanced”.
3. Select “Insert Phonebook Entry”.
4. Select the desired Phonebook Entry.
The selected entry is inserted.

Call Manager (M 8)

You can store the phone numbers and Email addresses of your friends, family and colleagues in the Phonebook.

Your phone can store up to 500 entries. In a Phonebook, you can save the following items:

Items Saved in the Handset Memory

Last Name	up to 16 characters
First Name	up to 16 characters
Add Phone Number	up to 3 phone numbers (up to 32 digits each)
Add Email Address	up to 3 Email addresses (up to 128 characters each)
Group	16 groups
Street Name	up to 64 characters
City Name	up to 64 characters
State Name	up to 64 characters
Postcode	up to 20 characters
Country Name	up to 32 characters
Note	up to 256 characters
Birthday	(date)

Picture	(file name)
Assign Tone/ Video	(file name)
Secret	(On or Off)

Items Saved in the SIM/USIM Memory

Name	up to 16 characters
Add Phone Number	1 phone number (up to 32 digits)
Add Email Address	1 Email address (up to 38 characters)
Group	up to 16 groups

Note

- *Each item depends on SIM/USIM Cards.*

Changing the List Displayed

“Call Manager” → *“Phonebook Settings”* → *“Source”*

1. Select “Handset” or “SIM”.

Selecting the Storage Memory

“Call Manager” → *“Phonebook Settings”* → *“Save to”*

1. Select “Handset”, “SIM” or “Choice”.

Sorting the Phonebook List Order

You can change the listing order of the Phonebook entries between by BoPoMoFo order or by group.

“Call Manager” → *“Phonebook Settings”* → *“View Phonebook”*

1. Select “By BoPoMoFo” or “By Group”.

Selecting the Search Mode

“Call Manager” → *“Phonebook Settings”* → *“Search Mode”*

1. Select “Character Search”, “BoPoMoFo Search” or “English Search”.

Add New

You can choose either the phone or SIM/USIM card memory locations to store the new entry. For switching locations, see “Selecting the Storage Memory”.

The amount of phone numbers that you can store to the SIM/USIM card is dependent on its capacity. Contact your network operator for details.

“Call Manager” → *“Phonebook”* → *“Add New”*

If you select the “Choice” option for the memory to be used, the selection is between “To Handset” and “To SIM”.

1. Select the field you wish to fill in, and enter the relevant information.
2. Press [Save] when finished.

Tip

- *To create an entry, at least one field must be filled (“Last Name”, “First Name”, “Add Phone Number” or “Add Email Address” for the handset memory; “Name”, “Add Phone Number” or “Add Email Address” for the SIM/USIM memory).*

Adding a Thumbnail to Entries

“Call Manager” → “Phonebook”

1. Highlight the desired entry.
2. Press [Options] and select “Edit”.
3. Select “Picture”.
4. Select “Assign Picture”.
5. Select the desired picture.
6. Press [Save] when finished.

Note

- If you delete a picture in the handset memory, the corresponding thumbnail is also deleted.

Viewing My Card (M 8-4)

You can register and edit your own information in the Phonebook as with other Phonebook entries.

“Call Manager” → “My Card”

Copying Phonebook Entries between SIM/USIM Card and Handset

“Call Manager” → “Advanced” → “Copy All Entries”

1. Select “From SIM to Handset” or “From Handset to SIM”.

Note

- When you insert the SIM/USIM card into your phone for the first time and start the Phonebook application, the confirmation screen is displayed automatically, asking you if you wish to copy or not. The number of Phonebook entries to be copied varies depending on the SIM/USIM capacity.
- If the memory space is not enough to save all entries, you cannot complete copying.

Dialling from the Phonebook

“Call Manager” → “Phonebook”

1. Highlight the desired entry and press ☺.

Tip

- If more than one phone number is registered for the entry, highlight the desired phone number after step 1 and press ☺.
- You can also dial from the details screen of the Phonebook. On the details screen, select the desired phone number and press ☺.

Editing Phonebook Entries

“Call Manager” → *“Phonebook”*

1. Highlight the entry you wish to edit.
2. Press [Options] and select “Edit”.
3. Modify the information.
4. Press [Save] when finished.

Assigning a Ringtone or a Ring Video Clip File to Each Entry

“Call Manager” → *“Phonebook”*

1. Highlight the desired entry.
2. Press [Options] and select “Edit”, then select “Assign Tone/Video”.
3. Select “For Voice Call”, “For Video Calling” or “For New Message”.
4. Select “Assign Tone” or “Assign Video”.
When selecting “Assign Video”, go to step 6.
5. Select “Preset Sounds” or “Sound Gallery”.
6. Select the desired tone or video clip.
7. Press [Save] when finished.

Deleting Phonebook Entries

Deleting All Phonebook Entries

“Call Manager” → *“Advanced”* → *“Delete All Entries”*

1. Select “Handset Entries” or “SIM Entries”.
2. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

Deleting a Phonebook Entry

“Call Manager” → *“Phonebook”*

1. Highlight the desired entry.
2. Press [Options] and select “Delete”.

Manage Group (M 8-2)

Different ringtones can be set for each group. If you do not change a group ringtone, the ringtone assigned in the Settings menu is used.

“Call Manager” → “Manage Group”

1. Highlight the desired group.
2. Press [Options] and select “Assign Tone/Video”.
3. Select “For Voice Call”, “For Video Calling” or “For New Message”.

4. Select “Assign Tone” or “Assign Video”.

When selecting “Assign Video”, go to step 6.

5. Select “Preset Sounds” or “Sound Gallery”.

6. Select the desired tone or video clip.

For details on selecting a ringtone or a ring video clip file in the Settings menu, see “Assigning a Ringtone” or “Assigning a Ring Video Clip File” on page 106.

Note

- You can only edit group names in the SIM/USIM card. You cannot edit the ringtone or ring video settings.

Editing the Group Name

You can edit group names to be assigned to the Phonebook entries. First, change the Phonebook displayed (p. 47).

“Call Manager” → “Manage Group”

1. Highlight the desired group name.
2. Press [Options] and select “Edit Name”.
3. Modify the name.

Message Groups (M 8-5)

You can create a mailing list to send the same message to a group of recipients at once. Up to 5 groups can be registered.

Creating a New Mailing List

“Call Manager” → “Message Groups” → “Add New Group”

1. Enter the group name.

The new group name is displayed following the last group on the Group List screen.

Adding Recipients to a Group

Up to 20 recipients can be registered in each list.

“Call Manager” → **“Message Groups”**

1. Select the desired group name.
2. Select “Assign New Entry”.
3. Select the desired entry.
The detailed screen is displayed.
4. Select the desired phone number or Email address.

Tip

- *If you modify the entry assigned in the group, you need to reassign it to the group. Press [Options] and select “Re-assign Entry” in step 3.*
- *To remove an entry from the group, press [Options] and select “Remove Entry” in step 3.*
- *To remove a group, highlight a group name and press [Options] and then select “Delete” in step 1.*

Sending a Message Using a Mailing List

“Call Manager” → **“Message Groups”**

1. Highlight the desired group name.
2. Press [Options] and select “Create Message”.
3. Select the desired type of messaging.

For further procedures, see “Creating a New Message” on page 62.

Memory Status

This function helps you to check the memory used in the Phonebook.

“Call Manager” → **“Advanced”** → **“Memory Status”**

Speed Dial List (M 8-3)

You can set a maximum of 8 phone numbers in the Speed Dial list (p. 26).

Setting Phonebook Entries in the Speed Dial List

“Call Manager” → **“Phonebook”**

1. Select the desired entry.
2. Highlight the desired phone number.
3. Press [Options] and select “Add to Speed Dial”.
4. Select the desired location.

Tip

- *The nine digit keys correspond to list numbers.*

To Edit the Speed Dial List

“Call Manager” → “Speed Dial List”

1. Highlight the entry you wish to edit.
2. Press [Options] and select “Re-Assign” (or “Assign”).

Sending a Phonebook Entry

“Call Manager” → “Phonebook”

1. Highlight the desired entry.
2. Press [Options] and select “Send Phonebook”.
3. Select “As Message”, “Via Bluetooth” or “Via Infrared”.

For “As Message”

For details, see “MMS” on page 62.

For “Via Bluetooth”

For details, see “Bluetooth” on page 124.

For “Via Infrared”

For details, see “Infrared” on page 127.

Receiving a Phonebook Entry

When the phone receives a Phonebook entry, a confirmation message is displayed in standby.

1. Press [Yes].

The received entry is saved in the Phonebook. Press [No] to reject.

Tip

- For details on entering Infrared or Bluetooth wireless settings, see “Connectivity” on page 124.

Sending a Voice Clip Message or Video Clip Message Using an Address from the Phonebook

“Call Manager” → “Phonebook”


1. Highlight the desired entry including the phone number or Email address you wish to use.
 2. Press [Options] and select “Create Message”.
 3. Select “Voice Message” or “Video Message”.
- For further procedures, see “Creating a New Message” on page 62.

Camera (M 5)

Your phone has a built-in digital camera that allows you to take pictures and record video clips wherever you are. This section starts with basic functions and operational procedures to take, save and send pictures and video clips, followed by common and unique functions to camera and video modes.

Taking Pictures

“Camera”


1. Press  to take the picture.

The shutter sounds and the still image of the taken picture is displayed.





2. Press [Save].

The taken picture is saved in Gallery.

To cancel, press [Cancel].





To send the taken picture, press  in step 2.

Note

- Press  instead of  in the viewer position of the display.
- When the video camera is launched, press [Options] and select “Go to Photo Camera”, or press  or  (in the viewer position of the display) to go to the photo camera mode.

- When you try to send the picture that has too large a file size, the picture size is resized for the message. The original sized picture is saved in Gallery.



Tip

- You can activate the camera by long pressing . Simply press  to take pictures, and start and stop recording.
- You can lock the focus by pressing  or pressing  halfway before taking a picture or recording a video clip.


Taking a Self-Portrait

You can take a self-portrait while looking at the main display.

“Camera”


1. Press [Options] and select “Switch to Int. Camera”.
Or press  in the viewfinder mode.
2. Press  to take the picture.
3. Press [Save].

The taken picture is saved in Gallery.

To return to the external camera, press [Options] and select “Switch to Ext. Camera” or press  in the viewfinder mode.

To Take a Picture in the Self-Portrait Position


You can take a self-portrait with the external camera.

1. Rotate the main display 180° clockwise from the normal position.
2. Press  on the side of the phone.

Note

- Do not rotate the main display anti-clockwise. Otherwise, the phone may malfunction.

Exiting from the Camera Mode in the Viewer Position of the Display

1. Long press  in the viewer position.




Recording Video Clips

You can record a video clip with your phone. You can also use this function in the viewer position of the display.

Recording Video Clips

“Camera”

The preview is displayed on the screen.

1. Press .
Press  in the viewer position of the display.
2. To stop recording, press .

3. Select “Save”.

The video clip is saved in Gallery.

To view the preview before saving, select “Preview”.





To send the video clip, select “Save and Send”.

Then select the desired way you wish to send. For further procedures, see “Creating a New Message” on page 62.

Note

- You can only send video clips when “For Message” is selected for the recording time. For details, see “Selecting the Recording Time” on page 60.



Using the Options Menu in the Viewer Position of the Display

1. Press .
The Options menu is displayed graphically.
2. Press  or  to highlight the desired option and then press  to make the selection.

Common Functions in the Photo and Video Camera Modes

Using the Digital Zoom Function

To Adjust the Zooming Ratio

1. In the viewfinder mode, press  or .

Once the phone has returned to standby, the zoom settings return to default.

To Enable the Optical Zoom

The optical zoom enables you to zoom the picture more clearly by the actual zooming action of the optical lens. The optical zoom is used up to the [×2] zooming ratio. If the zoom exceeds [×2], the digital zoom is used to further magnify.

“Camera” → **[Options]** → **“Settings”** → **“Optical Zoom”**

1. Select “Enable”.

Select “Disable” to disable.



If you select “Disable”, you can only use the digital zoom function.




2. Press  or .

Once the phone has returned to standby, the zoom settings return to default.

Adjusting the Exposure

“Camera” → **[Options]** → **“Exposure”**

1. Press  (Bright) or  (Dark).

   : (Bright → Normal → Dark)

Once the phone has returned to standby, the brightness settings return to default.


Mobile Light

To Change the Mobile Light Mode


Set the mobile light according to your purpose.

“Camera” → **[Options]** → **“Modes”** → **“Mobile Light”** → **“Switch On/Off”**

1. Select the desired mode.

“On” ():

The light is always on.

“Automatic” ():

The light turns on if the phone detects that the conditions are dark.

“Low Light” () (photo camera mode only):

Select this mode for macro shooting.

“Off”:

The light is always off.

The corresponding indicator is displayed on the screen. Select “Off” to turn it off.

To Change the Light Colour

You can take a picture in various colour modes.

“Camera” → **[Options]** → **“Modes”** → **“Mobile Light”** → **“Light Colour”**

1. Select the desired light colour.

Light Colours: White/Red/Yellow/Green/Blue/
Violet/Light Blue


Using the Self-Timer

Select the appropriate option.




“Camera” → **[Options]** → **“Modes”** → **“Self-timer”**
(*Photo Camera Mode*)

“Camera” → **[Options]** → **“Modes”** → **“Self-timer”**
(*Video Camera Mode*)

1. Select “On” or “Off”.

“” is displayed on the screen when you select “On”.

Switching between the Photo and Video Camera Modes

You can switch between the camera and video camera modes by pressing  or , or  (in the viewer position of the display).

Select the appropriate option.

“Camera” → **[Options]** → **“Go to Video Camera”**

“Camera” → **[Options]** → **“Go to Photo Camera”**

Selecting the Picture or Video Quality

Select the appropriate option.


“Camera” → **[Options]** → **“Picture Quality”**

“Camera” → **[Options]** → **“Video Quality”**

1. Select the desired picture or video quality.

: Super Fine

: Fine

: Normal

Note

- The better quality you select, the larger file size is needed.

Selecting the Storage Memory

Select the appropriate option.

“Camera” → **[Options]** → **“Settings”** → **“Save New Pictures”**

“Camera” → **[Options]** → **“Settings”** → **“Save New Videos”**

1. Select the desired location from “To Handset Memory”, “To Memory Card” or “Choice”.

Note

- If you select “Choice”, select the desired location every time you save.

Focus Setting

“Camera” → [Options] → “Modes” → “Focus”

1. Select the desired option.

AF : Auto Focus

MF : Manual Focus

 : Macro

Auto Save

You can set the phone to save pictures and video clips automatically.

“Camera” → [Options] → “Settings” → “Auto Save”

1. Select “On” or “Off”.

Auto Start

You can set the phone to start the camera application automatically by switching to the viewer position of the display.

“Camera” → [Options] → “Settings” → “Auto Start”





 
 
 
 
 
 
 
1. Select “On” or “Off”.

Using the Help Function

“Camera” → [Options] → “Help”

Common Shortcut Keys

If multiple options exist, they switch each time you press each following key.

	Photo Camera	Video Camera
	Zoom In	
	Zoom Out	
		Go to Photo Camera
	Go to Video Camera	
	Light On/Off	Mobile Light
	Exposure	
	Focus Lock	
	Zoom Max/Min	
	Ext./Int. Camera	
	Focus	
	Save to	
	Picture Size	
	Scene	Microphone
	Picture Quality	Video Quality
	Self-timer	
	Light Colour	
	Switch Viewfinders	Switch Screens

Note

- The “Switch Screens” option is available in “Preview” before you save a video clip. See “Recording Video Clips” on page 54.

Functions in the Photo Camera Mode

Selecting the Picture Size

You can select the size of pictures. All taken pictures are saved in the JPEG format.

“Camera” → [Options] → “Picture Size”

1. Select the desired size.

(External Camera)	1536 × 2048 dots/1200 × 1600 dots/960 × 1280 dots/ 768 × 1024 dots/480 × 640 dots/ 240 × 320 dots/120 × 160 dots
(Internal Camera)	240 × 320 dots/120 × 160 dots

Selecting the Scene

You can select the appropriate mode by scene when you take the picture.

“Camera” → [Options] → “Modes” → “Scene”

1. Select the desired scene.

The following eight modes are available:

“Automatic” (A): Automatically adjusted to surroundings.

“Night” (🌙):	Suited for night photography.
“Sports” (🏃):	Suited for moving objects.
“Characters” (👤):	Suited for high-contrast subjects such as text.
“Pet” (🐾):	Suited for moving objects at short range.
“Against Sun” (☀️):	Suited for avoiding objects being silhouetted against the light.
“Portrait” (👤):	Suited for a portrait.
“Portrait in Dark” (👤):	Suited for a portrait indoors or in dim light.

Selecting the Picture Effects

You can take a picture with special effects.

“Camera” → [Options] → “Modes” → “Camera Effects”

1. Select the desired effects.

The following five modes are available:

“Off”:	The camera effect is cancelled.
“Sepia”:	Creates a sepia-tone image.

- “Monochrome”: Creates a black and white image.
- “Negative”: Creates a negative image.
- “Sketch”: Creates a sketch-like image with contours of objects outlined.

Note

- You cannot use the *Camera Effects* function for picture sizes larger than 480 × 640 dots.




Continuous Shoot

You can take continuous shoots in various options.


“Camera” → [Options] → **“Modes”** → **“Continuous Shoot”**

1. Select the desired mode.




The following continuous shoot modes are available:

- “Off”: The continuous shoots are cancelled.
- “4 Pictures”/“9 Pictures” ( / ): Takes 4 or 9 pictures continuously. After selecting this mode, select from five types of speed or “Manual”.
- “Overlapped” (): Overlaps continuous pictures into one picture and makes an afterimage.

“Bracket” ():

After selecting this mode, select “Fast” or “Normal”. Takes 9 continuous pictures with various colours and brightness levels. After selecting this mode, press  then select “Fast” or “Normal”.

Note

- When you select “Manual” to take continuous pictures, press  (or  in the viewer position of the display) manually in the desired speed.
- When the Timer and Continuous Shoot functions are simultaneously set, “  ” (for “4 Pictures”, for example) is displayed instead.
- You cannot use the Continuous Shoot function for picture sizes larger than 768 × 1024 dots. “9 Pictures”, “Overlapped”, “Bracket” and “Very Fast” for “4 Pictures” are not available for picture sizes larger than 480 × 640 dots.

Selecting a Frame


You can select the frame from preset patterns or Picture Gallery.

“Camera” → [Options] → **“Modes”** → **“Add Frame”**

1. Select “Preset Frames” or “Picture Gallery”.

2. Select the desired frame.

The selected frame is confirmed on the display.

3. Press .

Note

- Images larger than 240×320 dots cannot be used.

Using the Full Screen

You can display the preview on the full screen without the soft key area and indicator area.

“Camera” → [Options] → **“Settings”**

1. Select “Full Viewfinder”.

To return to the normal viewfinder, select “Normal Viewfinder”.

Selecting the Shutter Sound

“Camera” → [Options] → **“Settings”** → **“Shutter Sound”**

1. Select the desired shutter sound from 3 preset patterns.

Note


- *Continuous Shoot* uses the specialised shutter sound that cannot be changed from the above settings.
- The shutter sound remains active even when “Ringer Volume” (p. 105) is set to “Silent” to prevent unauthorised use.

Functions in the Video Camera Mode


Selecting the Recording Time

“Camera” → [Options] → **“Record Time”**

1. Select “For Message” or “Extended Video”.

For Message ():

Limits the size to send a message depending on service providers.

Extended Video ():

Less than 30 minutes (depending on the memory).

2. Select “Large(QCIF)” or “Small(SubQCIF)” picture size for “For Message” and “QVGA(3gp)”, “QVGA(asf)”, “Large(QCIF)” or “Small(SubQCIF)” picture size for “Extended Video”.

Note

- *The display cannot be rotated while recording video clips. Recording will end if you rotate the display.*
- *If you select “For Message” for the recording time, the file size is limited depending on the service provider.*
- *“Save and Send” is not displayed after recording in the Extended Video mode.*

Recording Video Clips with the Sound

To record a video clip with the sound, the microphone needs to be activated.

“Camera” → **[Options]** → **“Settings”** → **“Microphone”**

1. Select “On” or “Off”.

Note

- *The microphone is already turned on in the default setting. Select “Off” to record a video clip without the sound.*
- *The file size of a video clip can be reduced if the sound is not recorded.*

Video Encoding

“Camera” → **[Options]** → **“Settings”** → **“Video Encode”**

1. Select the appropriate format.

Messages (M 4)

Your phone allows you to send and receive text, multimedia and Email, and receive WAP alerts as well.

SMS

SMS allows you to send text messages up to 765 characters long. If you send a message of more than 160 characters, it is split into several segments.

MMS

MMS allows you to send and receive multimedia messages of up to 300 KB with images, sound, or video clips attached.

Email

Email allows you to send messages of up to 300 KB.

Note

- *Some MMS functions may not always be available depending on your network. Contact your network operator for more information.*
- *Maximum message size varies depending on the settings by the network operator.*

Creating a New Message (M 4-1)


(SMS/MMS)

⊖ → “Create Message” → “Message”

(Email)

⊖ → “Create Message” → “E-mail”


1. Select the address field.
2. Select the desired method to enter the address.
3. For MMS, enter or select the Email address or phone number from the Phonebook list. For SMS, enter or select a phone number. For Email, enter or select an Email address.
 - To add multiple Email addresses or phone numbers, highlight the recipient field, press [Options], select “Edit Recipients”, then select “Phonebook”. Enter or select the Email address or phone number from the existing Phonebook.
 - To change the recipient types, press [Options], select “Edit Recipients”, then select “Change to CC” or “Change to BCC”.
 - To add a subject, press [Options] and select “Add Subject”.
4. Place the cursor in the message field.
5. Enter the message.

6. Highlight the “Send” indicator in the lower left of the screen. Press  and select “Send Message”.
After the message is sent, the message is moved to the Sent box.

Tip

- *To send the same message to a group of recipients, select “Select Group” in step 2, then select the desired group name. For details on creating a mailing list, see “Creating a New Mailing List” on page 50.*

To Add a Slide Show

1. In step 5 in “Creating a New Message” on page 62, press [Options] and highlight the “Other” indicator in the lower part of the screen, press  and select “Add Slide”.

If you wish to add more slides, select “Add Slide Before” or “Add Slide After”.

2. Enter the message.

If you wish to set the duration of each slide, press [Options] and select “Slide Duration”, then select the desired duration.


Tip

- *You can create messages up to 300 KB. Each slide can contain one picture and/or one sound file or video clip.*

To Remove or Replace Attachments

1. In step 5 in “Creating a New Message” on page 62, press [Options] and select the corresponding remove option for each attachment.

To Attach Gallery Data

1. In step 5 in “Creating a New Message” on page 62, highlight the “Picture”, “Sound” or “Video” indicator in the lower centre of the screen, and press .
2. Select “Saved Picture Gallery”, “Saved Sound Gallery” or “Saved Video Gallery”.
3. Select the desired file.

If you wish to take new pictures, record sounds or video clips, select “Take Picture”, “Record Sound” or “Record Video”.

- For attached pictures, select the appropriate resize option, as the maximum message size for sending varies depending on the network operator.

To Attach a Phonebook Entry

1. In step 5 in “Creating a New Message” on page 62, highlight the “Others” indicator in the lower right of the screen. Press “Insert Item” and select “Attach Phonebook”.
2. Select the desired entry.
If you wish to select your own Phonebook entry, select “My Card”.
3. Select the desired field.
The selected information is entered.

To Attach a Schedule Entry



1. In step 5 in “Creating a New Message” on page 62, highlight the “Others” indicator in the lower right of the screen. Press “Insert Item” and select “Attach Appointment”.
2. Select the desired day including a schedule entry you wish to add.
3. Select the desired schedule entry.

To Remove or Replace Attachments

1. In step 5 in “Creating a New Message” on page 62, press [Options] and select the corresponding remove option for each attachment.

Using the Sending Options

You can use the message sending options for each type of message.

1. Highlight the “Send” indicator in the lower left of the screen. Press  and select “Messaging Settings”.
 - “Read Report” (“On”, “Off”) (MMS): Confirms whether or not a report is sent notifying the sender that the message has been read.
 - “Delivery Report” (“On”, “Off”) (SMS/MMS): Enables or disables Delivery Report when the message is successfully sent to the recipient.
 - “Expiry Time” (“Maximum”, “30 minutes”, “1 hour”, “6 hours”, “1 day”, “1 week”) (SMS/MMS): Sets Expiry Time for a message to be saved in the server.
 - “Priority” (“High”, “Normal”, “Low”): Prioritises composed messages.
 - “Delivery Time” (“No delay”, “30 minutes”, “1 hour”, “6 hours”, “1 day”, “1 week”) (MMS): Sets the time the message is delivered after the Send key is pressed.
2. Highlight the “Send” indicator in the lower left of the screen. Press  and select “Send”.
After the message is sent, the message is moved to the Sent box.

Note

- The current message size displayed while you are creating the message is an approximation.
- If a message cannot be sent for some reason, the message stays in the Outbox and the “✉” is displayed in standby.

Tip

- To save the message without sending, press [Send] and select “Save to Drafts” in step 5 in “Creating a New Message” on page 62.
- You can send the following items attached to multimedia messages. Details are given in the following sections.
 - Gallery data
 - Phonebook entry
 - File (Schedule entry created by Calendar, Phonebook entry), etc.
- You can use the template option to help you compose messages. For details on using this option, see “Using Templates” on page 45.

Sending a Message in the Drafts Box (M 4-4)

⊖ → “Drafts”

1. Select the desired tab, SMS/MMS or Email.
2. Press [Options] and select “Edit”.
3. Modify the message, if necessary.
4. Highlight the “Send” indicator in the lower left of the screen. Press ● and select “Send”.

Reading Message

Messages you receive are saved in the Inbox.

⊖ → “Inbox”

1. Select the message you wish to view.

Storing the Phone Number of a Sender in the Phonebook

⊖ → “Inbox”

1. Highlight the message from which you wish to store the phone number or Email address.
2. Press [Options] and select “Save Address”.
The new Phonebook entry screen including the phone number is displayed. For details on creating a new Phonebook entry, see “Add New” on page 47.


Calling the Phone Number of a Sender Embedded in the Message

☰ → “Inbox”

1. Highlight the message including the phone number you wish to dial.
2. Press [Options] and select “Call Sender”.

Downloading a Single MMS

☰ → “Inbox”

1. Highlight the message alert () you wish to download.
2. Press [Options] and select “Download”.

Tip

- You can download multiple messages at the same time. See “Downloading Multiple MMS”.

Downloading Multiple MMS

☰ → “Inbox”


1. Press [Options] and select “Advanced”.
2. Select “Multiple Select”.
3. Select the desired message alert using the “Select” or “Select All” option.

4. Select “Download”.

The selected messages are downloaded at the same time.

Replying to a Message or to All Addresses

☰ → “Inbox”

1. Highlight the message the sender of which you wish to reply to.
2. Press [Options] and select “Reply” or “Reply all”.
3. Select “Reply” or “Reply with History”.
4. Enter the message.
5. Highlight the “Send” indicator in the lower left of the screen. Press  and select “Send”.

Forwarding a Message

☰ → “Inbox”

1. Highlight the message you wish to forward.
2. Press [Options] and select “Forward”.
3. Perform steps 1 to 5 in “Creating a New Message” on page 62.

Sorting the Messages in the List

☰ → “*Inbox*”

1. Press [Options] and select “Advanced”.
2. Select “Sort”.
3. Select the desired sort type.

Locking or Unlocking the Messages

☰ → “*Inbox*”

1. Highlight the message you wish to lock or unlock.
2. Press [Options] and select “Advanced”.
3. Select “Lock” or “Unlock”.

Cell Broadcasts (M 4-9)

You can receive cell broadcast messages or general messages such as weather forecasts and traffic reports. This information is broadcast to subscribers in certain network areas.

This function may not be available on all mobile phone networks. Contact your network operator for more information.

Enabling/Disabling Cell Broadcasts

☰ → “*Cell Broadcasts*” → “*Switch On/Off*”

1. Select “On” or “Off”.

Reading Cell Broadcast Messages

☰ → “*Cell Broadcasts*” → “*Read Messages*”

1. Select the desired subject.
2. Scroll the screen to read the message.
3. Press [Back].

Setting Languages for Cell Broadcast Messages

☰ → “*Cell Broadcasts*” → “*Settings*” → “*Language*”

The current language is displayed.

1. Press .
2. Press to check.
3. Press [Save].

Subscribing to Cell Broadcasts

Select the page of the cell broadcast message that you want.

☰ → “*Cell Broadcasts*” → “*Settings*” → “*Set Info Subjects*” → [Options]

1. Select the desired page.
2. Select “Options”.
3. Select “Add/Remove”.
4. Press [Back].

Tip

- If the desired page is not in the list that appears in step 2, select “Create Subject” in step 1, then enter the subject code to add a page. For details on the subject code, contact your service provider.

Area Info (M 4-10)

The Area Info is the message information that operators send to subscribers in certain areas.

When you receive Area Info, the message (area code) is displayed in standby.

Enabling/Disabling Area Info

☹ → “Area Info”

1. Select “On” or “Off”.

Note

- This function may not be available on all mobile phone networks. Contact your network operator for more information.
- If Area Info is set to “On”, the standby time will decrease.

Messaging Settings (M 4-11)

General Settings

 
☹ → “Messaging Settings” → “General Settings”

1. Select the item you wish to set up.
 - “Home Download”:
Controls message download timing inside your network area.
“Always Download”: Downloads messages immediately from the server.
“Always Defer”: Defers message download.
 - “Roaming Download”:
Controls message download timing when roaming outside of your network.
“Always Download”: Downloads messages immediately from the server.
“Always Defer”: Defers message download.
 - “Delivery Report”:
Enables or disables Delivery Report request.
 - “Read Report”:
Enables or disables Read Report request.

- “Expiry Time”:
This indicates the number of days and hours for which a message you send may remain undelivered to the message recipient. During this period, the message service centre will continually try to deliver the message to the recipient.
- “Delivery Report Allow”:
Confirms whether or not a report is sent notifying the sender when you receive an MMS/SMS.
- “Read Report Allow”:
Enables or disables Read Report Allow when the recipient is required to inform the sender that the message has been read.
- “Edit Signature”:
Opens the screen to enter the signature.
- “Auto Delete”:
Deletes the oldest message automatically, when the Inbox, Sent or both (Inbox and Sent) is full.
- “Automatic Resend”:
Tries to resend the failed SMS/MMS message up to two times (“On” or “Off” selection).
- “Message List View”:
Switches the mailbox listing between “One-line View” and “Two-line View”.

SMS Settings

☰ → “*Messaging Settings*” → “*SMS Settings*”

1. Select the item you wish to set up.
 - “Message Centre”:
Enter the message centre number.
If you wish to enter a country code for a message to an international number, long press  until a + sign is displayed.
 - “Message Format”:
Select the message format to be used when creating a new message.
 - “Reply Path”:
Accepts or rejects the same reply path with the send path when receiving the reply message for your message.

MMS Settings

☉ → “*Messaging Settings*” → “*MMS Settings*”

1. Select the item you wish to set up.
 - “MMS Accounts”:
Select the desired account or select “Create New” to enter the following settings.
“Profile Name”: MMS profile name
(Unique name)
“Proxy”:
Proxy setting for MMS
“Relay Server URL”: MMS relay server
 - “Slide Duration”:
Sets the duration of the slide.
 - “Max Message Size”:
Defines the maximum size of downloaded and created MMS messages.
 - “Creation Mode”:
When set to “Free”, you can attach files of any format to the mail. When set to “Restricted”, only certain formats and message sizes can be attached. The “Restricted” setting has priority over “Max Message Size”.

Email Settings

☉ → “*Messaging Settings*” → “*Email Settings*”

1. Select the item you wish to set up.
 - “Email Accounts”:
Select the desired account or select “Create New” to enter the following settings.
“Account Name”: Email account name (Unique name)
“POP3 Server”:
Server name, user ID, password and port number for POP3 server
“SMTP Server”:
Server name, user ID, password, port number for SMTP server and SMTP Authentication
“Access Point”:
Access point for Email
“Email Address”:
Email address
 - “Download Interval”:
Sets the download interval.
 - “Max Message Size”:
Defines the maximum size of downloaded and created MMS messages.

Note

- *The phone only supports text format Emails. Characters displayed in HTML format may not appear correctly.*

FET Mobile Internet (M 2)

Your phone is already configured to access FET Mobile Internet.

FET Mobile Internet is a new mobile internet portal which is your gateway to a new world of information, games, music and services.

Because your phone uses 3G (UMTS), it has a system that is faster than previous ways of getting mobile information. Also, the connection is 'always on' which means there is no need to wait for dialling up. You only have to pay for the data you send or receive, not how long you're connected.

Your phone contains a WAP browser used for surfing on the Mobile Internet, where you can get a lot of useful information. Normally, pages are designed for a mobile phone.

Your phone is already setup to FET Mobile Internet site for WAP/MMS Settings.

Main Menu

"FET Mobile Internet" → ***"Homepage"***

The FET Mobile Internet service page is displayed.

"FET Mobile Internet" → ***"Go to URL"***

The URL entry screen is displayed, allowing you to jump to a site.

"FET Mobile Internet" → ***"Bookmarks"***

See page 72.

"FET Mobile Internet" → ***"Alert Inbox"***

WAP Push alerts are displayed.

"FET Mobile Internet" → ***"My Saved Page"***

The saved screenshots are displayed.






"FET Mobile Internet" → ***"Access History"***

The history of pages you have recently browsed is displayed.

"FET Mobile Internet" → ***"Browser Settings"***

See page 74.

Navigating a WAP Page

- : Move the highlights around in the screen.
- : Executes the option displayed in the lower centre of the screen.
- : Launches the browser option menu.
- : Selects an action displayed in the lower right of the screen.
Used to access “FET Mobile Internet” by opening the browser.
-  (short press): Exits the browser.
(long press): Turns off the phone.

Editing Bookmarks

“FET Mobile Internet” → “Bookmarks”

1. Select the desired URL, and press [Options].
You can edit the list of Bookmarks by the following options:
 - “Open”: Selects a bookmark.
 - “Details”: Displays detailed information of the WAP page.
 - “Send page”: Sends the URL address to recipients.
 - “New”: Creates new folders or bookmarks.
 - “Rename”: Renames bookmarks.
 - “Edit URL”: Edits URL address of the bookmark.
 - “Move”: Moves bookmarks to another location.
 - “Delete”: Deletes bookmarks.
 - “Delete All”: Deletes all bookmarks.

The Browser Options

You can use various options of the WAP browser.

☉ → [Options]

- “Select”:
Selects a WAP page.
- “Home”:
Goes to the homepage.
- “Alert Inbox”:
Displays WAP Push alerts.
- “Bookmarks”:
(see “Editing Bookmarks”
on page 72.)
- “Mark Page”:
Marks the selected WAP
page.
- “Save This Link”:
Save the selected link.
- “Save Items”:
Saves items from WAP
pages.
- “Go to URL”:
Goes to the WAP page that
you enter the URL address.
- “Access History”:
Shows the history where
you have browsed.
- “Reload Page”:
Reloads the WAP page
again to get new
information.
- “Advanced”:
Displays the advanced
menus.
- “Exit”:
Exits the browser.

The Advanced Options

☉ → [Options] → “Advanced”

- “My Saved Page”:
Displays the bookmarked
pages.
- “Save This Page”:
Saves the WAP page as the
local file.
- “Send Page”:
Sends the WAP page data.
- “Details”:
Shows detailed information
of the WAP page.
- “Browser Data”:
Edits the browser data. You
can clear the cache/cookies/
history.
- “Search This Page”:
Searches specific words in
the WAP page.
- “Copy Text”:
Copies the text on the web
page.
- “Browser Settings”:
Displays the Settings
menus.
- “Restart Browser”:
Restarts the browser.
- “About”:
Displays the browser
information.

Browser Settings (M 2-7)

“*FET Mobile Internet*” → “*Browser Settings*”

- | | |
|------------------|---|
| “Font Size”: | Sets the size of the browsing font. |
| “Scroll Step”: | Sets the speed of scrolling. |
| “Send Referrer”: | Enables or disables the notification of the referrer. |
| “Cookies”: | Adjusts the setting of cookies. |
| “Downloads”: | Disables downloading data from the images/sounds/objects. |
| “Security”: | Adjusts the security prompt level. |
| “WAP Push”: | Sets whether you need confirmation for push message. |
| “Download to”: | Sets the download location. |


Media Player (M 7)

Media Player can play sound files and video clip files.







TV & Video (M 7-1)

Playing Back Video Clip Files

“Media Player” → **“TV & Video”** → **“Video Gallery”**

1. Select “Handset Memory” or “Memory Card”.
2. Select the desired file.
To pause playback, press .
To stop playback, press [Back].

Tip

- You can control the Video Player by using the following keys:
 - : Increases or decreases the volume.
 -  (long press): Mutes.
 - : Jumps to the next file.
 - : Returns to the top portion of the current file.
 -  (long press): Fast-forwards.
 -  (long press): Rewinds.

Searching a File to Be Played Back

“Media Player” → **“TV & Video”** → **“Video Gallery”**


1. Select “Handset Memory” or “Memory Card”.
2. Select “All Videos” or the desired playlist.

3. Press [Options] and select “Search”.
4. Enter the first few letters of the title.
Search results are displayed and the matching file is highlighted.

Adding a File to the Playlist

You can create a playlist registering desired files.

“Media Player” → **“TV & Video”** → **“Video Gallery”**


1. Select “Handset Memory” or “Memory Card”.
2. Select “All Videos” or the desired playlist.
3. Highlight the file you wish to add to the playlist.
4. Press [Options] and select “Add to Playlist”.
The playlists are displayed. For details on creating a playlist, see “Adding a New Playlist” on page 76.
5. Select the desired folder.
6. Press .

The file highlighted in step 3 is saved.

To delete files from the playlist, highlight the playlist and press [Options]. Then select “Delete from Playlist”.

Adding a New Playlist

“Media Player” → **“TV & Video”** → **“Video Gallery”**

1. Select “Handset Memory” or “Memory Card”.
2. Press [Options] and select “Add New Playlist”.
3. Enter the desired playlist name.
4. Press .

Note

- To delete the playlist, highlight the playlist and press [Options]. Then select “Delete Playlist”.

Editing the Video Clip File

“Media Player” → **“TV & Video”** → **“Video Gallery”**

1. Select “Handset Memory” or “Memory Card”.
2. Select “All Videos” or the desired playlist.
3. Select the file you wish to edit.
4. Press [Options] and select “Edit”.
5. Select the desired option.
 - “Crop”: Select the desired area to be cropped.
 - “Subtitle”: Create a subtitle to add to the file.

Settings

You can select a play mode for “Playback Pattern”, “Backlight” and “Display Size” when playing back video clip files.

“Media Player” → **“TV & Video”** → **“Video Gallery”**

1. Select “Handset Memory” or “Memory Card”.
2. Select “All Videos” or the desired playlist.
3. Select the file for which you wish to adjust the play mode.
4. Press [Options] and select “Settings”.
5. Select “Playback Pattern”, “Backlight” or “Display Size”.
6. Select from the following:
 - “Playback Pattern”
 - “Normal”: Plays back all files in the selected folder once and stops playback.
 - “Repeat”: Continues playback in the selected folder.
 - “Repeat All”: Plays back all files in the selected folder.
 - “Random”: Plays back files in the selected folder at random.


- “Backlight”
 - “Always On”: Lit while the file is played back.
 - “Always Off”: Unlit while the file is played back even if a key is pressed.
 - “Normal Settings”:
Works with the main backlight setting (p. 110).
- “Display Size”
 - “Original Size”: Displays the file in its original size.
 - “Enlarge”:
Displays the file in an enlarged size.
 - “Full Screen”:
Displays the file on the full screen.


SD VIDEO

Video clips that are recorded by a video camera or downloaded from mobile Internet sites can also be managed with SD VIDEO.

“Media Player” → **“TV & Video”** → **“SD VIDEO”**

1. Select the desired file.

To pause playback, press .

To stop playback, press .

To delete files from the playlist, highlight the playlist, press [Options] and select “Delete”.

Downloading Video Clip Files

“Media Player” → **“TV & Video”** → **“Download Videos”**

The video clip file download site is displayed.


Music Player (M 7-2)


You can play back MP3, AAC and AAC+ format sound files with Music Player. While playing back sound files in the background, you can use other menus.

Playing Back Sound Files

“Media Player” → **“Music Player”** → **“My Music”**

1. Select “All Music” or the desired playlist.
2. Select the desired file.

To pause playback, press .

To stop playback, press  [End].

Note

- You are asked whether or not to play sounds when the Silent mode is activated.
- To play the last played file, select “Last Played Music”. “Currently Playing” is displayed when the file is being played back.
- If the file names of your sound files include Chinese characters, some characters may not appear correctly in Music Player.

- *MP3/AAC/AAC+ Specifications*
MP3: Supports 48KHz/192kbps or less
AAC: Supports 48KHz/128kbps or less
AAC+: Supports 44.1KHz/48kbps or less
Due to the quality, some MP3 files may not be successfully played back even if they are within the specifications above.
- *You can play back MP3, AAC and AAC+ format sound files with Music Player but file formats other than .mp3, .mp4, .3gp are not supported.*

Tip

- *You can return to the Main menu screen while playing back the file in the background.*
- *You can create your playlist by selecting only the desired files (p. 79).*
- *You can make tone adjustment in step 2. Press [Options] and select “Tone Control”. Select “Normal”, “Bass”, “Surround” or “Surround Bass”.*
- *You can select the playback pattern in step 2. Press [Options] and select “Playback Pattern”.*
“Normal”: Plays back all files in the selected folder once and stops playback.
“Repeat”: Continues playback in the selected folder.
“Repeat All”: Plays back all files in the selected folder.

“Random”: Plays back files in the selected folder at random.

- *You can control the Music Player by using the following keys:*
 - ▲/▼: Increases or decreases the volume.
 - ⏏ (long press): Mutes.
 - ▶: Jumps to the next file.
 - ⏪: Returns to the top portion of the current file.
 - ▶ (long press): Fast-forwards.
 - ⏩ (long press): Rewinds.
 - ⏮: Plays back the file in the background.

Searching a File to Be Played Back


“Media Player” → “Music Player” → “My Music”

1. Select “All Music” or the desired playlist.
2. Press [Options] and select “Search”.
3. Enter the first few letters of the title.
Search results are displayed and the matching file is highlighted.

Adding a File to the Playlist


You can create a playlist registering desired files.

“Media Player” → **“Music Player”** → **“My Music”**

1. Highlight the file you wish to add to the playlist.
2. Press [Options] and select “Add to Playlist”.
The playlists are displayed. For details on adding a playlist, see “Adding a New Playlist”.
3. Select the desired folder.
4. Press .
The file highlighted in step 1 is saved.
To delete the playlist, highlight the playlist and press [Options]. Then select “Delete Playlist”.

Adding a New Playlist

“Media Player” → **“Music Player”** → **“My Music”**

1. Press [Options] and select “Add New Playlist”.
2. Enter the desired playlist name.
3. Press .

Downloading Music Files

“Media Player” → **“Music Player”** → **“Download Music”**

The music file download site is displayed.

Note

- *This service is not available with some service providers. Please contact your service provider for more information.*

Gallery (M 6)

Gallery contains several types of picture, sound and video clip data. Also included in Gallery are frequently used text message phrases and accessed WAP pages (addresses) which you can use. You can also transmit picture, sound and video clip data via infrared or *Bluetooth* wireless technology to OBEX-enabled phones.

Picture Gallery (M 6-1)

Pictures that are taken by a digital camera or images that are downloaded from mobile Internet sites can be managed. You can register pictures in the following formats: JPEG, PNG, WBMP and GIF.



Viewing Pictures

“Gallery” → *“Picture Gallery”*

1. Select the file you wish to view.
The selected picture is displayed.

Switching the Memory Source

“Gallery” → *“Picture Gallery”*

1. Select the file you wish to view.
The selected picture is displayed.
To display the list from the memory card, press .
To go back to the handset memory, press .

Using Images as Wallpaper

“Gallery” → *“Picture Gallery”*

1. Highlight the file you wish to use as wallpaper.
2. Press [Options] and select “Set as Wallpaper”.

Saving an Image to Phonebook Entries

You can use this option only for pictures saved in the handset memory.

“Gallery” → *“Picture Gallery”*

1. Highlight the file you wish to add to Phonebook.
2. Press [Options] and select “Save to phonebook”.
To overwrite, select the data you wish to save.
To save as a new entry, select “As New”.
For details on entering a name, see “Add New” on page 47.

Editing Pictures

“Gallery” → “Picture Gallery”

1. Highlight the file you wish to edit.
2. Press [Options] and select “Picture Editor”.
3. Select the desired option.

Note

- “Picture Editor” may not be available depending on the original picture and copyright issued.

Adjusting the Size

You can adjust the picture to an appropriate size depending on the scene.

“Gallery” → “Picture Gallery”

1. Highlight the file you wish to adjust the size of.
2. Press [Options] and select “Resize”.
3. Select the desired option.

Note

- “Resize” may not be available depending on the original picture and copyright issued.

Tip

- For other option menus, see “Common Option Menus” on page 83.

Downloading Picture Files

“Gallery” → “Picture Gallery” → “Download More”


The picture file download site is displayed.


Video Gallery (M 6-2)


Video clips that are recorded by a video camera or video clips that are downloaded from mobile Internet sites can be managed.

Playing Back Video Clip Files


“Gallery” → “Video Gallery”


1. Select the file you wish to play back.
2. Press .

To pause playback, press .

To resume, press  again.

To stop playback, press [Back].

To display the list from the memory card, press .

To go back to the handset memory, press .

Using a Video Clip as a Ring Video

You can set your video clip to play back when the phone rings.

“Gallery” → **“Video Gallery”**

1. Highlight the desired video clip.
2. Press [Options] and select “Set as Ring Video”.

Tip

- For other option menus, see “Common Option Menus” on page 83.

Downloading Video Clip Files

“Gallery” → **“Video Gallery”** → **“Download More”**


The video clip file download site is displayed.

Sound Gallery (M 6-4)

The downloaded sound files and the AMR data recorded by Voice Recorder are managed in Sound Gallery. The default ringtones are not contained within Sound Gallery. Only the sound files you can play back with the phone are stored in Sound Gallery.

Playing Back Sound Files

“Gallery” → **“Sound Gallery”**

1. Select the file you wish to play back.
To stop playback, press .


Note

- This option may not be available in all regions.

Switching the Memory Source

“Gallery” → **“Sound Gallery”**

1. Press .

The tab switches and the list is displayed from the memory card. To go back to the handset memory, press .

2. Select the desired sound file.

Using the Sound Files as a Ringtone

“Gallery” → **“Sound Gallery”**

1. Highlight the file you wish to use as a ringtone.
2. Press [Options] and select “Set as Ringtone”.

Note

- AMR format music files cannot be used for ringtones.

Tip

- For other option menus, see “Common Option Menus” on page 83.

Other Documents (M 6-7)

Some types of files are stored in the Other Documents folder of the phone. You can edit and use these files as Gallery data.

Opening the Document File

“Gallery” → “Other Documents”


1. Select the desired file.

Tip

- For other option menus, see “Common Option Menu”.

Common Option Menus

Activating Files with Copyright Protection (DRM)

Some pictures, sound files, and video clips have a digital copy protection program, which is called DRM (Digital Rights Management). You need to activate the digital licence permission to open the files. Files protected with DRM are displayed with .

Select the appropriate option.

“Gallery” → “Picture Gallery”

“Gallery” → “Video Gallery”

“Gallery” → “Sound Gallery”

“Gallery” → “Other Documents”

1. Highlight the file you wish to activate.
2. Press [Options] and select “Activate”.

Note

- Some pictures with DRM may not open even when an attempt is made to activate it.

Sending Gallery Data

Select the appropriate option.

“Gallery” → “Picture Gallery”

“Gallery” → “Video Gallery”

“Gallery” → “Sound Gallery”

“Gallery” → “Other Documents”

1. Highlight the desired file.
2. Press [Options] and select “Send”.
3. Select “As Message”, “Via Bluetooth” or “Via Infrared”.

For details on creating a message, see “Creating a New Message” on page 62.

For details on *Bluetooth* wireless settings, see “Bluetooth” on page 124.

For details on Infrared settings, see “Infrared” on page 127.

Note

- *Pictures/Sounds/Video clips protected by copyright cannot be sent attached to a message, with the exception of Separate Delivery files.*
- *When pairing, you need to enter your passcode when establishing contact with a Bluetooth wireless technology enabled device for the first time.*

Receiving Gallery Data

When the phone receives Gallery data, a confirmation message is displayed in standby.

1. Press [Yes].

The received data is saved in the corresponding Gallery folder.

Tip

- *For details on Infrared or Bluetooth wireless settings, see “Connectivity” on page 124.*

Using Gallery Data

You can copy, move, sort, rename, and delete the saved Gallery data.

Select the appropriate option.

“**Gallery**” → “**Picture Gallery**”

“**Gallery**” → “**Video Gallery**”

“**Gallery**” → “**Sound Gallery**”

“**Gallery**” → “**Other Documents**”

1. Highlight the desired file.
2. Press [Options] and select “Advanced”.
3. Select the desired option.
 - “Move”:
Moves files to another folder. Select the desired folder to move to.
 - “Copy”:
Copies files. Select the desired folder to copy to.
 - “Create Folder”:
Creates a new folder.
 - “Multiple Select”:
Selects multiple files.
 - “Sort”:
Sorts the file. Select the desired files to sort.

To Rename the File

Select the appropriate option.

“Gallery” → **“Picture Gallery”**

“Gallery” → **“Video Gallery”**

“Gallery” → **“Sound Gallery”**

“Gallery” → **“Other Documents”**

1. Highlight the desired file.
2. Press [Options] and select “Rename”.

To Delete the File

“Gallery” → **“Picture Gallery”**

“Gallery” → **“Video Gallery”**

“Gallery” → **“Sound Gallery”**

“Gallery” → **“Other Documents”**

1. Highlight the desired file.
2. Press [Options] and select “Delete”.

To See the Gallery Details

Select the appropriate option.

“Gallery” → **“Picture Gallery”**

“Gallery” → **“Video Gallery”**

“Gallery” → **“Sound Gallery”**

“Gallery” → **“Other Documents”**

1. Highlight the file you wish to view the details of.
2. Press [Options] and select “Details”.

Selecting Multiple Files

You can select more than one item from Gallery for moving, copying and deleting.

Note

- *The following procedure applies when the entries other than “Download More” are highlighted.*


Select the appropriate option.

“Gallery” → **“Picture Gallery”** → [Options]

“Gallery” → **“Video Gallery”** → [Options]

“Gallery” → **“Sound Gallery”** → [Options]

“Gallery” → **“Other Documents”** → [Options]

1. Select “Advanced”.
2. Select “Multiple Select”.
3. Press  to check the desired file names.
4. Press [Options] and select the desired option.

Tip


- *To remove the check, select the file again or select “Unselect” in step 4.*
- *If you wish to select all files, select “Select All” in step 4. To unselect all, select “Unselect All”.*

Text Templates (M 6-6)

You can register up to 50 text templates for use in text messages and multimedia messages. The maximum capacity of the text templates is 100 KB.


Adding Phrases to Text Templates

“Gallery” → “Text Templates” → “Add New Template”

1. Enter the text and press .

Editing Text Templates

“Gallery” → “Text Templates”

1. Highlight the text template you wish to edit.
2. Press [Options] and select “Edit”.
To view the text template, press [Options] and select “View”.
To delete the text template, press [Options] and select “Delete”.
3. Modify the text and press .

Sending Text Templates

“Gallery” → “Text Templates”

1. Highlight the text template you wish to send.
2. Press [Options] and select “Send Template”.

Memory Status (M 6-8)

This function helps you to check the memory status of the handset memory or memory card. Memory status covers the following.

Handset Memory: Applications, Pictures, Videos, Sounds, Others, Total and Free

Memory Card: Pictures, Videos, Sounds, Others, Total and Free

“Gallery” → “Memory Status”

1. Select “Handset Memory” or “Memory Card”.

Java™ (M 1)

Java™ Gallery (M 1-1)


The list of Java™ applications is displayed.

Downloaded applications are displayed in order starting from the latest one.

Executing Applications


“Java™” → “Java™ Gallery”

Downloaded applications are sequentially displayed from the latest one.

1. Select the title of the application you wish to execute.
The selected application is executed. When using network connection type applications, connection to the network can be selected.
2. To end the application, press  and select “End”.



Setting a Screensaver Application

“Java™” → “Java™ Gallery”

1. Highlight the desired screensaver application.
2. Press .
The confirmation screen to set a screensaver is displayed.
3. Press [Yes].

Downloading Applications

“Java™” → “Java™ Gallery” → “Download More”

1. Select the application you wish to download.
The confirmation screen is displayed after various WAP browser screens.
2. Press  to start downloading.
3. Press  when finished.

Setting Network Access

In order to allow Java™ applications to access to the network, you need to set the network access.

“Java™” → “Java™ Gallery” → [Options] → “Permission” → “Network Access”

1. Select “Session”, “Ask Once”, “Blanket” or “No”.

Viewing Application Information

You can check the information of Java™ applications.

“Java™” → “Java™ Gallery”

1. Highlight the desired Java™ application.
2. Press [Options] and select “Information”.

Deleting an Application

You can delete an application from the handset memory.

“Java™” → “Java™ Gallery”

1. Highlight the desired Java™ application.
2. Press [Options] and select “Delete”.

Set Java™ Wallpaper (M 1-2)

You can set Java™ Wallpaper for the standby screen.

Switching the Java™ Wallpaper On or Off

“Java™” → “Set Java™ Wallpaper” → “Switch On/Off”

1. Select “On” or “Off”.

Note

- If you select “On” and a Java™ Wallpaper is not set, a list displaying available Java™ Wallpaper is displayed, asking you to make a selection.

Set Applications

“Java™” → “Set Java™ Wallpaper” → “Set Applications”

The downloaded applications are displayed.

1. Select the desired Java™ Wallpaper.




 

Java™ Settings (M 1-3)

Application Volume

You can set the volume of the application such as the sound effect to one of the five levels or silent. When “Application Volume” is set to “Silent”, this setup has priority.

“Java™” → “Java™ Settings” → “Application Volume”

The current volume level is displayed.

1. Press  (or ) to increase the volume or press  (or ) to decrease the volume and then press .

Backlight

“Java™” → “Java™ Settings” → “Backlight” → “Switch On/Off”

1. Select “Always On”, “Always Off” or “Normal Settings”.
 - “Always On”: Lights while the application is operated. Blinks when the blink setting is on.
 - “Always Off”: Turns off while the application is operated even if a key is pressed.

“Normal Settings”: Works with the main backlight setting (p. 110). Blinks when the blink setting is on.

To Set the Blinking Operation

This setting enables the backlight to be controlled by the application. If set to “Off”, the backlight cannot be turned on from the application.

“Java™” → “Java™ Settings” → “Backlight” → “Blink”

1. Select “On” or “Off”.

Vibration

When the vibrator is set in the application, you can choose whether the operation is enabled or not.




“Java™” → “Java™ Settings” → “Vibration”

1. Select “On” or “Off”.

Calls & Alarms

You can set the priority of incoming calls and alarms while an application is operating.

“Java™” → **“Java™ Settings”** → **“Calls & Alarms”**

1. Select “Voice Call”, “Video Calling”, “Incoming Message” or “Alarm”.
2. Select the desired method.
 - “Call Priority”, “Message Priority” or “Alarm Priority”:
The application is suspended automatically, and you can receive a call or a message, or the alarm will sound. After finishing the call or the message, or the alarm ends, the suspend indicator () is displayed letting you know there is a suspended application.
 - “Call Notice”, “Message Notice” or “Alarm Notice”:
The marquee (character scrolls) is displayed on the first line of the screen while the application continues. If you press , the application is suspended, and you can receive a call or a message. After finishing the call or the message, the suspend indicator () is displayed letting you know there is a suspended application.

Java™ Information (M 1-4)

The information about the licences belonging to Java™ is displayed.

Organiser (M 3)

Calendar (M 3-1)

Calendar allows you to easily schedule appointments or events at any given date or time.

These entries can also be sent via infrared or *Bluetooth* wireless technology to a PC to share the same schedules. When you exchange entries with other devices, the date and time displayed may be different to that of the original data depending on the data format of the receiving device.

Creating a New Entry

“Organiser” → *“Calendar”*

1. Select the desired day to which you wish to add an event.
2. Press [Options] and select “Add New Entry”.
3. Enter the subject.
4. Enter the location.
5. Select the desired category.
6. Enter the start date and then enter the start time.
7. Select the duration.

When selecting “Other”, enter the desired reminder date and time.

8. Select the reminder time.
When selecting “Other”, enter the desired reminder date and time.
9. Press [Save].

Note

- *If the date and time settings have not been entered, the date and time entry screen is displayed (p. 112).*
- *The reminder will not sound when “Ringer Volume” (p. 105) is set to “Silent”.*

To Change the Type of the Reminder Tone or Video

1. On the New Entry screen, select “Reminder”.
2. Select “Assign Tone/Video”.
3. Select “Assign Tone” and then select “Preset Sounds” or “Sound Gallery”, or select “Assign Video”.
4. Select the desired sound or video clip file.
For details on selecting a tone, see “Assigning a Ringtone” on page 106.

To Change the Duration of the Reminder Tone or Video

1. On the New Entry screen, select “Reminder”.
2. Select “Duration”.
3. Select the time period.

When you select “Other”, you can enter the desired time in two digits using the keypad.

To Change the Repeat Option of the Reminder

1. On the New Entry screen, select “Repeat”.
2. Select the desired repeat option.

To Enter the Description

1. On the New Entry screen, select “Description”.
2. Enter a memo for the schedule entry.

To Make the Entry Secret

1. On the New Entry screen, select “Secret”.
2. Select “On” to make the data secret or select “Off” to leave it as it is.

Viewing a Schedule Entry

“Organiser” → “Calendar”

1. Select the day you wish to view.

 


 


To Search By Date

1. In any view, press [Options] and select “Go to”.
2. Select “Today” to display today or “Enter Date” to enter the desired date.

 


 


Tip

- In the monthly or weekly view, you can control the view by using the following:

Monthly view

- : Displays the previous month.
- : Displays the next month.
- : Displays the weekly view.
- : Moves the cursor to today.
- : Moves the cursor to left (the previous day) or to right (the next day).
- : Moves the cursor upward (last week) or downward (next week).

Weekly view

- : Displays the previous week.
- : Displays the next week.
- : Displays the monthly view.
- : Moves the cursor to today.
- : Moves the cursor to left (the previous day) or to right (the next day).
- : Moves the weekly view up or down (the previous hour or next hour).

Editing a Schedule Entry

“Organiser” → “Calendar”

1. Select the day you wish to edit.
2. Press [Options] and select “Edit”.
3. Select the desired item and modify the entry.
4. Press [Save].

Deleting Schedule Entries

1. In any view, press [Options] and select “Delete”.
2. Select the desired option.

“This Appointment” (daily view):

Deletes the selected entry.

“All This Day”: Deletes all entries for the selected day.

“All This Week” (weekly view):

Deletes all entries for the selected week.

“Up to Last Week” (weekly view):

Deletes all entries before this week.

“All This Month” (monthly view):

Deletes all entries for the selected month.

“Up to Last Month” (monthly view):

Deletes all entries before this month.

“All Appointments” (weekly and monthly view):

Deletes all entries in this application.

Sending a Schedule Entry

“Organiser” → “Calendar”

1. Select the day including schedule entries you wish to send.
2. Press [Options] and select “Send”.
3. Select “As Message”, “Via Bluetooth” or “Via Infrared”.

For “Via Bluetooth”

For details, see “Bluetooth” on page 124.

For “Via Infrared”

For details, see “Infrared” on page 127.

Note

- *When pairing, you need to enter your passcode when establishing contact with a Bluetooth wireless technology enabled device for the first time.*

Receiving a Schedule Entry

When the phone receives a schedule entry, a confirmation message is displayed in standby.

1. Press [Yes].

The received entry is saved in the Calendar.
Press [No] to reject.

Tip

- For details on entering Infrared or Bluetooth wireless settings, see “Connectivity” on page 124.

Viewing the Memory Status

1. In any view, press [Options] and select “Memory Status”.

Alarms (M 3-2)

Setting the Alarms

The alarm function allows you to be alerted at a specified time.

Note that you need to set the current date and time before setting the alarm function if it has not been done already.

Note

- The alarm will not sound when “Alarm Volume” is set to “Silent”. When the profile is set to “Silent”, the “General Volume” setting (p. 105) has priority.

“Organiser” → “Alarms”

1. Select the blank setting.
2. Enter the desired time.
3. Press [Save].

To Change the Type of Repeat Options

1. On the Set Alarm screen, select “Repeat”.
2. Select “Once Only”, “Every Day” or “Selected Days”.

- “Once Only”: The alarm sounds once only.
“Every Day”: The alarm sounds every day at the specified time.
“Selected Days”: The alarm sounds on the selected day of the week at the specified time.





To Change the Type of Alarm Tone or Video Clip File

1. On the Set Alarm screen, select “Assign Tone/Video”.
2. Select “Assign Tone” and then select “Preset Sounds” or “Sound Gallery”, or select “Assign Video”.
3. Select the desired tone or video clip file.
For details on selecting a tone, see “Assigning a Ringtone” on page 106.

To Change the Snooze of the Alarm Tone

1. On the Set Alarm screen, select “Snooze”.
2. Select the desired snooze option.

To Change the Alarm Volume

1. On the Set Alarm screen, select “Alarm Volume”.
2. Press  (or ) to increase the volume or press  (or ) to decrease the volume.

To Change the Vibration of Alarm Tone

1. On the Set Alarm screen, select “Vibration”.
2. Select “On”, “Link to Sound” or “Off”.
For details on selecting a vibration, see “Vibration” on page 107.

To Change the Duration of the Alarm Tone

1. On the Set Alarm screen, select “Duration”.
2. Select the desired duration.

Resetting an Alarm Setting

“Organiser” → “Alarms”

1. Highlight the alarm you wish to reset.
2. Press [Options] and select “Reset Alarm”.

Resetting All Alarm Settings

“Organiser” → “Alarms” → “Clear All”

1. Press [Yes] or [No].

Calculator (M 3-3)

The calculator function performs the 4 arithmetic calculations using up to 12 digits.

 
“Organiser” → **“Calculator”**


The calculator is displayed on the display.

 
Key operations for calculation are as follows:



To enter a decimal point, press .

To clear the entered number or function, press .

To do the calculations, press .

To start a new calculation, press .

 
Rate Conversion

You can also use the calculator as a currency calculator to convert from/to a home currency using a conversion rate that you enter.

To Set a Currency Conversion Rate

“Organiser” → **“Calculator”** → [Options] → **“Currency Converter”** → **“Exchange Rate”**

1. Select “Domestic” or “Foreign”.
2. Enter the currency conversion rate.

To delete a digit, press .

To Convert a Value

“Organiser” → **“Calculator”**



1. Enter the value to be converted.
2. Press [Options] and select “Currency Converter”.
3. Select “Convert to Domestic” or “Convert to Foreign”.

Voice Recorder (M 3-4)





This allows you to record a voice clip, which can be used to remind you of schedule entries or be sent within a multimedia message. The recorded voice clip is saved in Sound Gallery. Voice clips are saved in .amr format.

Recording a Voice Clip

“Organiser” → “Voice Recorder”



1. Press  to start recording.
To stop recording before the recording time is over, press .
2. Select “Save” to save the voice clip.

Note

- Press  (or ) or  (or ) to adjust the sound volume when playing back the recorded file.

Sending Voice Clips

“Organiser” → “Voice Recorder”

1. Press  to start recording.
2. Press  to stop recording.
3. Select “Save and Send”.
For details on creating a message, see “Creating a New Message” on page 62.

Selecting the Record Time

“Organiser” → “Voice Recorder” → [Options] → “Record Time”

1. Select “For Message” or “Extended Voice”.
When selecting “Extended Voice”, you can save the voice clip only in a memory card automatically.

Selecting the Storage Memory

“Organiser” → “Voice Recorder” → [Options] → “Save Recording to”

1. Select the desired location.
When selecting “Choice”, you can select the location when saving a voice clip.

Scanner (M 3-5)


With the built-in digital camera, you can read texts and barcodes in Jan format and QR codes, and create QR codes. The scanned data can be saved as a URL, Email address and text.

Note

- When scanning does not take place, it may be due to one of the following reasons: type or size of barcode, scratches, dirt, damage, print quality, light reflection, etc.

Reading Barcodes

“Organiser” → “Scanner” → “Scan Barcode”

1. Display the barcode using the external camera.
2. Press .
3. Press [Options] and select the desired option.

The options vary depending on the scanned data.

“Open Link”: The browser opens the URL.

“Copy URL”: The URL is copied.

“Save”: The URL is saved.

“Send Message”: The result is sent as SMS or MMS.


“Copy”: The result is copied.

To Use the Continuous Scanning

1. In scanning mode, press [Options] and select “Continuous Scan”.
2. Select “On” or “Off”.




Opening a Barcode Picture

“Organiser” → “Scanner” → “Open Barcode”

1. Select the desired picture data for barcode.
Press  to save.



Viewing the Scanned Data

“Organiser” → “Scanner” → “Scanned Results”

1. Highlight the data you wish to view, then press .
2. Enter the desired text or select the desired data, then press .
3. Press  to save.

Creating QR Codes

“Organiser” → “Scanner” → “Create QR Code”





1. Select the desired option.
“Text Input”: Create a QR code using the text you enter.
“Gallery”: Create a QR code using the Gallery data.
2. Enter the desired text or select the desired data, then press .
3. Press  to save.

Tip

- The QR code is saved in a PNG format file.

Scanning Text

“Organiser” → “Scanner” → “Scan Text”

1. Display text using the camera.
2. When the bar under the scanned text is blue, press .
3. Press  or  to select the desired text, then press .
4. Press [Options] and select the desired option.

“OK”: The scanned result is in the text entry screen.

“Select/Edit”: The scanned result can be modified.

“Change Mode”: The scanned result can be converted to a web address, mail address, phone number or to roman text.



To Use Reversed Text

1. In scanning mode, press [Options] and select “Reversed Text”.
2. Select the desired option from “Auto”, “Normal” or “Reversed”.

Stopwatch (M 3-6)

You can store 4 lap times when using the stopwatch function.

“Organiser” → “Stopwatch”

1. Press  to start.
Press [LAP] to view the lap time before the stopwatch stops. Last 4 lap times are saved.
2. Press  to stop.

Tip

- You can save a record of lap time and stop time in Text Templates by pressing [Options] and selecting “Save to Templates”.

Resetting Time

1. After stopping the stopwatch, press [Options] and select “Reset”.

Tasks (M 3-7)

You can register your schedule as task entries for a given date or time.

Creating a New Entry

“Organiser” → **“Tasks”**

1. Select “Add New Entry”.
2. Enter the subject.
3. Enter the due date and then due time.
4. Select the reminder time.
When selecting “Other”, enter the desired reminder date and time.
5. Press [Save].

Note

- *If the date and time settings have not been entered, the date and time entry screen is displayed (p. 112).*

To Change the Type of Alarm Tone or Video Clip File

1. On the Reminder screen, select “Assign Tone/Video”.
2. Select “Assign Tone” and then select “Preset Sounds” or “Sound Gallery”, or select “Assign Video”.

3. Select the desired tone or video clip file.
For details on selecting a tone, see “Assigning a Ringtone” on page 106.

To Change the Duration of Alarm Tone or Video


1. On the Reminder screen, select “Duration”.
2. Select the desired duration.

To Change the Description

1. On the New Entry screen, select “Description”.
2. Enter a memo for the task entry.

To Make the Entry Completed or Uncompleted

“Organiser” → **“Tasks”**

1. Highlight the desired entry.
2. Press .
3. On the view screen, press [Options] and select “Check”.

To make the entry uncompleted, select “Uncheck”.

To Make the Entry Secret

1. On the New Entry screen, select “Secret”.
2. Select “On” to make the data secret or select “Off” to leave it as it is.

Sending a Task Entry

“Organiser” → “Tasks”

1. Highlight the task entry you wish to send.
2. Press [Options] and select “Send”.
3. Select “As Message”, “Via Bluetooth” or “Via Infrared”.

For “Via Bluetooth”

For details, see “Bluetooth” on page 124.

For “Via Infrared”

For details, see “Infrared” on page 127.

Note

- *When pairing, you need to enter your passcode when establishing contact with a Bluetooth wireless technology enabled device for the first time.*

Viewing the Memory Status

“Organiser” → “Tasks”

1. Press [Options] and select “Memory Status”.

Deleting Entries

“Organiser” → “Tasks” → [Options] → “Delete”




1. Select the desired option.
 - “This Task”: Deletes the selected entry.
 - “All Completed Tasks”: Deletes all checked entries.
 - “All Tasks”: Deletes all entries.

World Clock (M 3-8)

Setting the Time Zone

“Organiser” → “World Clock”

1. Press [Edit].
2. Select “Set Time Zone”.

The current time zone is indicated on the world map.
3. Press  or  to change the time zone.
4. Press .

To Set the Custom Time Zone

“Organiser” → *“World Clock”*

1. Press [Edit].
2. Select “Set Time Zone”.
The current time zone is indicated on the world map.
3. Press [Options] and select “Set Custom Zone”.
4. Enter the desired city name and time.




Setting the Daylight Saving

“Organiser” → *“World Clock”*

1. Press [Edit].
2. Select “Daylight Saving”.
3. Select “On” or “Off”.

Countdown Timer (M 3-9)

“Organiser” → *“Countdown Timer”*

1. Enter the time to count.
You can set the time from 1 second to 60 minutes.
2. Press  to start counting.
3. Press  to pause.
Press  again to continue counting.

Editing the Countdown Time

1. In the countdown start screen, press [Options] and select “Edit”.
2. Modify the desired time.

Expenses Memo (M 3-10)

You can record an expenses memo with predefined or edited categories.

Recording in the Expenses Memo

“Organiser” → *“Expenses Memo”* → *“Add New Expense”*

1. Enter the expenses using the digit keys.
2. Select the desired category.
Expenses memo is registered.

Viewing Totals

“Organiser” → **“Expenses Memo”** → **“Totals”**

Recorded expenses are displayed on the screen.

To Change Category

1. In the total view, select the desired item.
2. Press [Options] and select “Change Category”.
3. Enter a category name.

To Change Amount

1. In the total view, select the desired item.
2. Press [Options] and select “Change Amount”.
3. Enter the desired amount using the digit keys.

To Delete a Recorded Item

1. In the total view, select the desired item.
 2. Press [Options] and select “Delete Item”.
- The selected item is deleted from the list.

To Delete All Items

1. In the total view, select the desired item.
2. Press [Options] and select “Delete All”.

Editing the Category Name



“Organiser” → **“Expenses Memo”** → **“Edit Category”**

1. Select the desired category name.
2. Modify the name.

Phone Help (M 3-11)

You can view the help list and use it to guide you in the phone’s functions.

“Organiser” → **“Phone Help”**

1. Press  or .

SIM Application (M 10)

You can enjoy applications on the SIM/USIM card.
Please contact your service provider for further details.

Settings (M 9)

Profiles (M 9-1)

The tone sound and vibration settings can be customised for each profile according to your environment.

There are 6 profiles: “Normal”, “Meeting”, “Activity”, “Car”, “Headset” and “Silent”.

Activating a Profile


“Settings” → “Profiles”

1. Select the desired profile.

Note

- When a profile is set, the corresponding indicator described on page 22 is displayed in standby.

Tip

- Long press  to switch Profiles settings between the mode most recently activated and Silent mode in standby.

Resetting Profile Settings

“Settings” → “Profiles”

1. Highlight the profile you wish to reset.
2. Press [Options] and select “Set to Default”.










3. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

Ringer Volume

You can adjust the ringer and general volume.

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
 2. Press [Options] and select “Personalise”.
 3. Select “Volume”.
Each current volume level is displayed.
 4. Select “For Incoming Call”, “For New Message” or “General Volume”.
 5. Press  (or ) to increase the ringer volume or press  (or ) to decrease the ringer volume and then press .
- To select “Increasing Volume”, press  (or ) at level 5.
- To select “Silent”, press  (or ) at level 1.

Tip

- You can select from two levels or an increasing volume, when selecting the “Silent” profile.

Note

- “Increasing Volume” may not be assigned for “General Volume”.

Assigning a Ringtone

You can select the ringtone from 28 tones including 5 patterns, 13 sound effects and 10 melodies. You can also select a sound in Sound Gallery as the default ringtone excluding the AMR or WAVE format.

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Ringtone/Ringvideos”.
4. Select “For Voice Call” or “For Video Calling”.
5. Select “Assign Tone”.
6. Select “Preset Sounds” or “Sound Gallery”.
7. Highlight the ringtone you wish to use.

To hear the demo play, press [Options] and select “Play”.

8. Press [Options] and select “Assign”.

Note

- Even if you delete a ringtone that uses a sound in Sound Gallery, the setting remains the same and the default ringtone sounds. If you delete a ringtone assigned for the ringtone, the default ringtone is set.

Assigning a Ring Video Clip File

You can select a video clip file in Video Gallery as the default ring video clip file.

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Ringtone/Ringvideos”.
4. Select “For Voice Call” or “For Video Calling”.
5. Select “Assign Video”.
6. Highlight the ring video clip file you wish to use.
To preview the file, press [Options] and select “Play”.
7. Press [Options] and select “Select”.

Message Notification

When receiving messages, your phone will notify you of their arrival with the ringtone or ring video you specify.

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Ringtone/Ringvideos”.
4. Select “For New Message”.
5. Select “Assign Tone” or “Assign Video”.
If “Assign Tone” is selected, select “Preset Sounds” or “Sound Gallery”.
6. Highlight the desired ringtone or ring video clip file.
For details on selecting a ringtone or a ring video, see “Assigning a Ringtone” or “Assigning a Ring Video Clip File” on page 106.
7. Press [Options] and select “Assign” (for a ringtone) or “Select” (for a video clip).
8. Select “For New Message” and select “Duration”.
9. Enter the desired duration.

Keypad Tones

When the keypad tone is set on, you will hear a confirmation tone each time you press any keys.

“Settings” → “Profiles”


1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “System Sounds”.
4. Select “Keypad Tones”.
5. Highlight the desired tone pattern.
6. Press [Options] and select “Assign”.

Vibration

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Vibration”.
4. Select “On”, “Link to Sound” or “Off”.

Tip

- When the “Link to Sound” option is selected in step 4, the vibrator synchronises with your selected melody to pulse in time with the melody. Please note that not all melodies support the “Link to Sound” option.
- When you select “On” or “Link to Sound” in step 4, “” is displayed in standby.

Event Light

When the light option is on, the mobile light blinks while the phone receives a call or message.

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Event Light”.
4. Select “For Voice Call”, “For Video Calling” or “For New Message”.
5. Select “Switch On/Off”.
6. Select “On” or “Off”.

To Change the Light Colour

You can select from 7 colours and 1 pattern for each profile.

1. In step 5 in “Event Light”, select “Light Colour”.
2. Select the desired colour.

Tip

- If you select “Disco” in step 2, all 7 colours flash in order.

Status Light

When the light option is on, the mobile light or small light blinks to let you know when you have missed calls or new messages.

“Settings” → “Profiles”



1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Status Light”.
4. Select “For Missed Call” or “For New Message”.
5. Select “Switch On/Off”.
6. Select “On(Mobile Light)”, “On(Small Light)” or “Off”.

To Change the Light Colour

You can select from 7 colours when “Status Light” is set to “On(Mobile Light)”.

1. In step 5 in “Status Light”, select “Mobile Light Colour”.
2. Select the desired colour.

Any Key Answer

You can answer a call by pressing any key except ,  and [Busy]. For details, see page 26.

“Settings” → “Profiles”

1. Highlight the profile you wish to customise.
2. Press [Options] and select “Personalise”.
3. Select “Any Key Answer”.
4. Select “On” or “Off”

Setting the Display (M 9-2)

You can change the settings of the main display.


Setting the Main Display

Wallpaper

For the standby screen, 3 default pictures are provided. Pictures taken with the digital camera or images downloaded from a WAP site can be used for wallpapers.

Setting from Picture Gallery

“Settings” → “Display Settings” → “Wallpaper”

1. Select “Picture Gallery”.
2. Select the desired picture.
3. After displaying the picture, press .

Note

- Some pictures cannot be used because of their picture and data types.
- If the picture in Picture Gallery is already set, it is displayed in step 1. Press [Change] and select the desired picture.

Assigning the Pictures

Pictures can be displayed when turning the power on or off, when receiving an incoming call, or when operating the alarm.

Pictures taken with the digital camera or images downloaded from a WAP site can be used.


To Set Built-in Pictures

“Settings” → “Display Settings” → “Assign Pictures”

1. Select the desired scene to set the picture to. Select “Pattern 1”, “Pattern 2” or “Pattern 3” when you select “Incoming” or “Alarm”.

To Set Saved Pictures

“Settings” → **“Display Settings”** → **“Assign Pictures”**

1. Select the desired scene to set the picture to.
2. Select “Picture Gallery”.
3. Select the desired picture.
4. After displaying the picture, press .
5. Specify the area you wish to display using the navigation keys.

Note

- Some pictures cannot be used because of their picture and data types.
- If the picture in Picture Gallery is already set, it is displayed in step 2. Press [Change] and select the desired picture.

Setting the Greeting Message

You can set the message which is displayed when the phone is turned on.

“Settings” → **“Display Settings”** → **“Greeting Message”** → **“Switch On/Off”**

1. Select “On” or “Off”.
2. Select “Edit Message” and enter the message when you select “On” in step 1.
Up to 10 characters can be saved as a message.

Backlight

The backlight will shut off if you do not press the keypad for a certain length of time. You can specify a desired time to elapse before the backlight shuts off, which will help conserve battery life.

Tip

- When you purchase this phone, Backlight is set to 15 seconds.

To Select the Backlight Time Out




“Settings” → **“Display Settings”** → **“Backlight”** → **“Time Out”**

1. Select the desired time.
Select “Off” to shut it off.

Adjusting the Brightness of the Backlight

You can adjust the brightness of the backlight of the screen between 4 levels.

“Settings” → **“Display Settings”** → **“Backlight”** → **“Brightness”**

1. Press  (Bright) and  (Dark) for maximum clarity.
2. Press .

Setting the Display Saving

The screen of this phone will automatically turn off after a given amount of time. You can change the length of time before the Display Saving goes into effect, which will help conserve battery life.

Tip

- *When you purchase this phone, Display Saving is set to 2 minutes.*

“Settings” → **“Display Settings”** → **“Display Saving”**

1. Select the desired time.

Note

- *Display Saving does not work while you are making a call, using WAP, or using an application.*
- *To cancel the Display Saving: The display saving continues until either a key is pressed or there is an incoming alert. The first key press only cancels this function. You must press another key in order to enter any numerical or text value.*

Setting Video Out

With the optional cable, you can connect your phone to other device, such as TVs or videos set to output, and display images or video clips stored on your phone. It is also possible to output and display data stored in the memory card.

To Set Output Function On

You need to connect your phone to the other device with the optional cable beforehand.

“Settings” → **“Display Settings”** → **“Video Output”** → **“Switch On/Off”**

1. Select “On”.

Select “Off” on the Output screen when finished.

Note

- *When closing your phone, you cannot output data to the connected device.*
- *It is not possible to output some images or video clips.*

To Select Display Size

You can display images in enlarged size.

“Settings” → **“Display Settings”** → **“Video Output”** → **“Display Size”**

1. Select “Enlarge”.

To display in original size, select “Original Size”.

To Rotate Image

“Settings” → “Display Settings” → “Video Output” → “Rotation Setting”

1. Select the desired item.

The image displayed on the device will rotate until the selected degree.

To Select TV System

You need to select the appropriate TV system. Refer to the instruction manual of your connected device to confirm the TV system.

“Settings” → “Display Settings” → “Video Output” → “TV System”

1. Select the desired item.

Sound Settings (M 9-3)

You can use this menu to check or edit the current Profiles settings (except “Any Key Answer”).

Date & Time (M 9-4)

You need to set the correct time and date in order for your phone’s various time-based functions to work correctly.

“Settings” → “Date & Time” → “Set Date/Time”

1. Enter the day, month and year using the digit keys.
2. Enter the time using the digit keys.




Setting the Daylight Saving

“Settings” → “Date & Time” → “Daylight Saving”

1. Select “On” or “Off”.




Setting the Time Zone

“Settings” → “Date & Time” → “Set Time Zone”

1. Press  or  to select the home city to set.
2. Press .

Customising the Time Zone

“Settings” → “Date & Time” → “Set Time Zone” → [Options] → “Set Custom Zone”

1. Enter the city name.
2. Enter the time-zone differences using the digit keys.
Press  or  to switch between – and +.
3. Press .

Display Date & Time

You can display the calendar or the current date and/or time in standby.

To Set the Clock Display

“Settings” → “Date & Time” → “Display Date & Time” → “Show Clock”

1. Select the desired clock type or “Off” to set clock display off.

To Set the Calendar Display

“Settings” → “Date & Time” → “Display Date & Time” → “Show Calendar”

1. Select the desired calendar type or “Off” to set calendar display off.

World Clock

For details, see page 101.

Selecting the Time Format

“Settings” → “Date & Time” → “Time Format”

1. Select “24 Hour” or “12 Hour”.

Selecting the Date Format

“Settings” → “Date & Time” → “Date Format”

1. Select “D-M-Y”, “M-D-Y” or “Y-M-D”.

Setting the Calendar Format

“Settings” → “Date & Time” → “Calendar Format”

1. Select “Sunday-Saturday” or “Monday-Sunday”.

Language Setting (M 9-5)

You can change the language that the phone uses to display messages.

“Settings” → “Language”

1. Select the desired language.

Note

- If you select “Automatic” in step 1, the language preset on the SIM/USIM card is selected.
- If the language preset on the SIM/USIM card is not supported, then the default language of the phone is selected.

Tip

- You can also change the input language on the text entry screen (p. 38).

Call Settings (M 9-6)

Set various types of functions and services for voice calls.

Voicemail & Diverts

This service can be used to divert incoming calls that you cannot answer. Calls can be diverted to another phone number or to your Voice mail system.

Note

- *This service may not be available on all mobile phone networks. Contact your service provider for more information.*

To Set the Voice Mail Numbers

You can divert calls to the network Voice Mail service centre. Depending on whether you are inside or outside your network area, you can set two Voice Mail numbers, a number for your home network area or for a roaming network area.


Note

- *This service depends on the SIM/USIM card. Contact your SIM/USIM card vendor for more information.*

“Settings” → “Call Settings” → “Voicemail & Diverts” → “Voicemail” → “Settings” → “Voicemail Centre Number”

1. Enter the desired phone number.

To Access the Voice Mail Centre

1. Long press  in standby.


To Activate the Voice Mail Service

“Settings” → “Call Settings” → “Voicemail & Diverts” → “Voicemail” → “Activate”

1. Select one of the following options:

“Always”:	Diverts all calls without ringing.
“When Busy”:	Diverts incoming calls while you are talking on the phone.
“No Answer”:	Diverts incoming calls if you do not answer a call within a certain period of time.
“Not Reachable”:	Diverts incoming calls when your phone has no network service or is switched off.

If you select “No Answer”, select the period of time from 6 levels (05 to 30 seconds).

2. Press .

To Activate the Diverts Service

Select the appropriate option.


“Settings” → **“Call Settings”** → **“Voicemail & Diverts”** → **“Diverts”**

1. Select “Activate” or “By Service”.


If you select “By Service”, you can select further divert options.

2. Select “Always”, “When Busy”, “No Answer” or “Not Reachable”.

If you select “No Answer”, select the period of time from 6 levels (05 to 30 seconds).

3. Enter a phone number to which you wish to divert calls or search for it in the Phonebook (p. 48).
4. Press .

Note

- When “Voice Calls” diverts are set to “Always”, “ ” is displayed in standby.

To Check the Diverts Status

“Settings” → **“Call Settings”** → **“Voicemail & Diverts”** → **“Status”**

1. Select the diverts option you wish to check.

To Deactivate the Diverts/Voice Mail Service

“Settings” → **“Call Settings”** → **“Voicemail & Diverts”** → **“Deactivate”**

1. Select the desired option.

To Cancel the Diverts and Voice Mail Service

Once you have changed the diverts settings, you can cancel them all with this service.

“Settings” → **“Call Settings”** → **“Voicemail & Diverts”** → **“Cancel All”**

Call Waiting

Note

- This service may not be available on all mobile phone networks. Contact your network operator for more information.

If you wish to be able to receive another incoming call while you have a call in progress, you must activate the Call Waiting service.

“Settings” → **“Call Settings”** → **“Call Waiting”**

1. Select “On”, “Off” or “Status”.

Restrict Calls

This function lets you place restrictions on incoming and outgoing calls. To activate this option you will need the specified password, which is available from your service provider.

“Settings” → “Call Settings” → “Restrict Calls”

1. Select from one of the following options:

“Outgoing Calls”: Restricts outgoing calls.

“Fixed Dialling No.”: Restricts calls for fixed dialling numbers in the Phonebook.

“Incoming Calls”: Restricts incoming calls.

“Rejected Numbers”: You can register for dialling numbers to be restricted.

“Withheld Call”: Restricts withheld calls.

“Change N/W Password”: Changes the network password.

2. Select one of the following options:

(For “Outgoing Calls”)

“Bar All Outgoing Calls”: Restricts all outgoing calls except emergency calls.

“Bar International Calls”: Restricts all outgoing international calls.

“Only Local & Home”: Restricts all outgoing international calls except to your home country.

(For “Incoming Calls”)

“Bar All Incoming Calls”: Restricts all incoming calls.

“Bar if Abroad”: Restricts all incoming calls when you are outside of the coverage from your registered network operator.

3. Select one of the following options:

(For “Outgoing Calls” and “Incoming Calls”)

“All Services”: Restricts all services.

“Voice Calls”: Restricts all voice calls.

“Video Callings”: Restricts all video callings.

“Fax”: Restricts all fax calls.

“Messages”: Restricts all messages.

4. Select “On”, “Off” or “Status”.

5. Enter the network password.

To Cancel Settings

“Settings” → “Call Settings” → “Restrict Calls”

1. Select “Outgoing Calls” or “Incoming Calls”.
2. Select “Cancel All”.
3. Enter the network password.

Fixed Dialling No.

When the Fixed Dialling No. is enabled, you can only call pre-registered numbers.

To Enable Fixed Dialling No.

“Settings” → “Call Settings” → “Restrict Calls” → “Fixed Dialling Number” → “Switch On/Off”

1. Select “On” to enable this function.

To Add a New Name

“Settings” → “Call Settings” → “Restrict Calls” → “Fixed Dialling Number” → “Edit Dial List”

1. Highlight the blank entry, press [Options], then select “Add New Dial”.
2. Enter your PIN2 code.
3. Add a name and a phone number.
For details on adding a name and a phone number, see “Add New” on page 47.
4. Press [Save].

Rejecting an Incoming Call

You can register phone numbers you do not wish to answer.

To Reject the Registered Number

“Settings” → “Call Settings” → “Restrict Calls” → “Rejected Numbers” → “Switch On/Off”

1. Select “On” or “Off”.

To Register the Rejected Number

“Settings” → “Call Settings” → “Restrict Calls” → “Rejected Numbers” → “Set Rejecting Number”

1. Select a blank field.
2. Enter the desired number.

Changing the Network Password

“Settings” → “Call Settings” → “Restrict Calls” → “Change N/W Password”

1. Enter the old network password.
2. Enter a new network password.
3. Enter the new network password again.

If you enter the incorrect password, you are asked to enter the password again.

4. Press .

Minute Minder

Minute Minder function informs you of your talk time by sounding a tone after every minute.

“Settings” → “Call Settings” → “Minute Minder”

1. Select “On” or “Off”.

Displaying Call Timer

“Settings” → “Call Settings” → “Display Call Timer”

1. Select “On” or “Off”.

Auto Redial

“Settings” → “Call Settings” → “Auto Redial”

1. Select “On” or “Off”.

Video Calling Settings (M 9-7)

Set various types of functions and services for video callings.

Selecting the Camera Picture

You can select an image shown to the caller between the sub camera image and an alternative image.

Turning On or Off the Speaker

“Settings” → “Video Calling Settings” → “Loudspeaker”

1. Select “On” to turn on the loudspeaker on the back of the phone, or select “Off” to turn it off.

Selecting the Picture Quality

Select the desired data format for your environment.

“Settings” → “Video Calling Settings” → “Incoming Picture Quality”

“Settings” → “Video Calling Settings” → “Outgoing Picture Quality”

1. Select “Normal”, “Quality Priority” or “Frame Rate Priority”.
Select “Frame Rate Priority” to perform faster communication.

Backlight

With this setting On, the phone's backlight is on when making a video calling.

“Settings” → **“Video Calling Settings”** → **“Backlight”**

1. Select “Always On”, “Always Off” or “As Normal Setting”.

The “As Normal Setting” option depends on the backlight setting of the main display (p. 110).

Mute

You can mute the microphone while making a video calling.

“Settings” → **“Video Calling Settings”** → **“Mute Microphone”**

1. Select “Off” to cancel the mute.

Assigning Hold Guidance Picture

You can display an image saved in the phone on your main display while you are putting a call on hold.

“Settings” → **“Video Calling Settings”** → **“Hold Guidance Picture”**

1. Select “Preset Picture” or “Picture Gallery”.
2. Select the desired picture.

Security (M 9-8)

Enabling/Disabling the PIN Code

If the PIN code is enabled you are asked to enter the PIN code each time the phone is switched on. Your PIN code is registered on the SIM/USIM card and you should have been made aware of the code when you purchased the SIM/USIM card. Contact your service provider for further details.

“Settings” → **“Security Settings”** → **“PIN Entry”** → **“Switch On/Off”**

1. Select “On” to enable the PIN code or “Off” to disable.
2. Enter your PIN code.

Note

- *If you enter the wrong PIN code three times in step 2, the SIM/USIM card will lock. To remove the lock, contact your service provider or SIM/USIM card vendor.*

To Change the PIN Code

This allows you to change the PIN code registered on the SIM/USIM card. Before you change the PIN code, select “On” in step 1 in “Enabling/Disabling the PIN Code”.

“Settings” → “Security Settings” → “PIN Entry” → “Change PIN”

1. Enter the existing PIN code.
2. Enter a new PIN code.
3. Enter the new PIN code again.

Changing the PIN2 Code

The PIN2 code is used to protect certain functions in the phone such as Fixed Dialling No. and call cost limits. The following shows you how to change the PIN2 code.

“Settings” → “Security Settings” → “Change PIN2”

1. Enter the existing PIN2 code.
2. Enter a new PIN2 code.
3. Enter the new PIN2 code again.

Handset Lock

The Handset Lock is an additional security feature which prevents unauthorised use of the phone or certain features.

“Settings” → “Security Settings” → “Handset Lock”

1. Select “On” or “Off”.
2. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code”.

To Change the Handset Code

Before you change the handset code, select “On” in step 1 in “Handset Lock”.

“Settings” → “Security Settings” → “Change Handset Code”

1. Enter the old handset code.
2. Enter a new handset code.
3. Enter the new handset code again.

Function Lock

By setting this option on, all the functions of your phone will be locked until the correct handset code is entered.

“Settings” → “Security Setting” → “Function Lock”

1. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code”.

To Turn Off the Function Lock

Enter your handset code in standby to turn the Function Lock off.

Showing Secret Data

By setting this option on, the hidden data can be displayed.

“Settings” → “Security Settings” → “Show Secret Data”

1. Select “On” to display or “Off” to hide.

Card Settings (M 9-9)

Formatting Memory Card

“Settings” → “Card Settings” → “Format Card”

1. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

2. Press [Yes] to start formatting.

Master Reset (M 9-10)

You can reset some of the settings or all the settings from M1 to M12.

Resetting Some of the Settings

“Settings” → “Master Reset” → “Reset Settings”

1. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

Resetting All Settings from M1 to M12

“Settings” → “Master Reset” → “Reset All”

1. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

Call Log (M 11)



The phone will record the last 10 missed calls, received calls and dialled numbers.


Viewing Call Log

“Call Log”


1. Select “All Calls”, “Dialled Numbers”, “Missed Calls” or “Received Calls”.

The selected call log list is displayed.

To switch logs, press  or .

2. Select the phone number you wish to view.
If you wish to dial the number, press .

Tip

- You can also confirm call logs by pressing  in standby.

Sending Messages

1. In the call log list, highlight the call log you wish to send a message to.
2. Press [Options] and select “Create Message”.
For details on creating a message, see “Creating a New Message” on page 62.

Deleting a Call Log

1. In the call log list, press [Options] and select “Delete”.

Call Timers (M 11-5)

This function lets you check the duration of your calls.

Checking the Duration of the Last Call and All Calls

“Call Log” → “Call Timers”

1. Select “Received Calls” or “Dialled Calls”.
The duration of the last call and all calls is displayed.

Resetting Call Timers

“Call Log” → “Call Timers” → “Clear Timers”

1. Enter your handset code.
The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

Data Counter (M 11-7)

You can confirm the number of bytes used in the 3G (UMTS) transmission.

“Call Log” → “Data Counter”

1. Select “Last Data” or “All Data”.

Resetting All Data Counter

“Call Log” → “Data Counter” → “Clear Counter”

Connectivity (M 12)

By configuring the settings in this menu, you can connect to *Bluetooth* wireless technology or infrared enabled phones via these connections, as well as a PC via *Bluetooth* wireless technology or infrared connections.

Bluetooth (M 12-1)


For using the *Bluetooth* wireless function, you need to search for other *Bluetooth* wireless technology enabled devices to establish contact with your phone. Keep your phone within a distance of 10 metres from the devices before searching.

Using the Bluetooth Wireless Function

To Turn On or Off

“Connectivity” → “Bluetooth” → “Switch On/Off”

1. Select “On” or “Off”.

The *Bluetooth* wireless setting is activated, and “” is displayed.

To Show or Hide Your Phone

“Connectivity” → “Bluetooth” → “Visibility”

1. Select the desired visibility settings.

“Show My Phone”: Allows other devices to recognise your phone.

“Hide My Phone”: Hides your phone from other devices.

To Search for Devices to be Paired

“Connectivity” → “Bluetooth” → “Search for Devices”

The phone starts searching for devices within 10 metres. A maximum of 16 devices can be searched for and listed on the display.

1. Select the desired device for pairing.
2. Enter the device passcode.

Note

- *If the Bluetooth wireless function is off before searching, the phone turns the Bluetooth wireless function on automatically and starts searching.*
- *You can only select one device for pairing. To change the paired device, see “To Activate the Paired Device” on page 125.*


Tip

- You can save battery power by turning the Bluetooth wireless function off while it is not in use. Turn the Bluetooth wireless function off in “To Turn On or Off” on this page or in “To Turn Off Automatically” on page 126.
- During a call, you can divert voice calls to the paired handsfree device. Press [Options], select “Transfer Audio” and then “To Bluetooth” or “To Handset”.

To Activate the Paired Device

Paired devices are listed by tabs for all devices and for handsfree devices.

“Connectivity” → “Bluetooth” → “Paired Devices”

1. Press  to switch to the list for handsfree devices.
2. Select the desired device you wish to activate.




To Check and Uncheck the Paired Handsfree Devices

“Connectivity” → “Bluetooth” → “Paired Devices”

1. Select handsfree device list.
2. Press [Options] and select “Check” or “Uncheck”.

To Rename or Delete the Paired Devices

“Connectivity” → “Bluetooth” → “Paired Devices”

1. Press  or  to switch between all devices and handsfree devices.
2. Highlight the desired device.
3. Press [Options].
4. Select “Change Name” or “Delete”.
You can rename or delete by pressing  after selecting desired device.

To Send All Data to Other Devices

You can send all the data for applications such as Phonebook, Calendar, Tasks, etc. to selected devices.

“Connectivity” → “Bluetooth” → “Send All”

1. Select the desired device.
If a device is not specified, searching starts automatically.
2. Enter your handset code.
The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.
3. Enter the device passcode for unpaired devices.
4. Select the desired data to send.

Note

- If the handsfree device is connected, the confirmation screen to deactivate the handsfree function is displayed. Press [Yes] to deactivate.

Bluetooth Wireless Settings

With this setting you can rename your phone, prevent other phones from recognising your phone, turn the *Bluetooth* wireless function off automatically to save battery power, etc.

To Rename Your Phone

You can rename your phone. The name is shown in other devices when your phone is detected.

“Connectivity” → “Bluetooth” → “Bluetooth Settings” → “Device Name”

1. Enter the new device name.

To Turn Off Automatically

“Connectivity” → “Bluetooth” → “Bluetooth Settings” → “Bluetooth Timeout”

1. Select the desired time.

Your phone turns the function off automatically in the specified time.

To Switch the Handsfree Settings

You can switch modes of the handsfree kit between two modes; talking with the handsfree kit or talking with the phone.

“Connectivity” → “Bluetooth” → “Bluetooth Settings” → “Handsfree Setting”

1. Select “Private mode” or “Handsfree mode”.

“Private mode”: For talking with the handset

“Handsfree mode”: For talking with the handsfree kit

To Turn the Authentication Request On or Off

You can request the sender or receiver of the OBEX data to authenticate the passcode (exchanging the passcode) before pairing devices.

“Connectivity” → “Bluetooth” → “Bluetooth Settings” → “Authentication”

1. Select “On” or “Off”.

Note

- No authentication is required for the paired devices.
- Even if you select “Off”, you may authenticate the passcode when the sender requests it.

To See Your Phone Details

“Connectivity” → “Bluetooth” → “Bluetooth Settings” → “My Phone Details”


Infrared (M 12-2)

In order to use the infrared function, you need to search for other infrared enabled devices to establish contact with your phone. Keep your phone within a distance of 20 centimetres from the devices before searching. The infrared setting will return to off when no data is transmitted/received via infrared communication.

Turning On or Off

“Connectivity” → “Infrared” → “Switch On/Off”

1. Select “On” or “Off”.

The infrared setting is activated, and “” is displayed.

Sending All Data

“Connectivity” → “Infrared” → “Send All”

1. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

2. Select the desired data to send.
3. Enter the authorisation code.

Network Settings (M 12-3)

Selecting a Service Automatically

Each time the power is turned on, your phone selects a service automatically.

“Connectivity” → “Network Settings” → “Select Service”

1. Select “Auto”.

Selecting a Service Manually

“Connectivity” → “Network Settings” → “Select Service”

1. Select “GSM”.

Selecting a Network Automatically

Each time the power is turned on, your phone always tries to connect to the preferred network.

If your phone is not connected to the network, you can perform the following immediately to establish the preferred network connection.

“Connectivity” → “Network Settings” → “Select Network” → “Automatic”


Setting the Network Manually


“Connectivity” → “Network Settings” → “Select Network” → “Manual”

1. Select the desired network.

Adding a New Network

“Connectivity” → “Network Settings” → “Select Network” → “Add New Network”

If there are no entries, press  and go to step 2.

If there is an entry, press  and perform the following steps.

1. Select “Add”.
2. Enter the country code (up to 3 digits).
3. Enter the network code (up to 3 digits).
4. Enter a new network name (up to 25 characters).
5. Select “Select network type”.
6. Select the desired network.

Editing the Preferred List

“Connectivity” → “Network Settings” → “Select Network” → “Set Preferred”

1. Select the name of the network you wish to edit.
2. Select “Insert” to insert over the selected position, “Add to end” to insert at the end or “Delete” to delete.

Showing the Network Information

“Connectivity” → “Network Settings” → “Network Information”

Information about the operator name, package and services are displayed.

Internet Settings (M 12-4)

Note

- *In normal operations, you do not need to change the settings.*
- *Internet settings have already been entered in your phone depending on your network operator. You may have restrictions on viewing, deleting, copying or modifying the settings. Contact your network operator for details.*

WAP Settings

“Connectivity” → “Internet Settings” → “WAP Settings” → “Create New”

- “Profile Name”: WAP profile name (Unique name)
- “Proxy”: Proxy setting for WAP
- “Home”: Home page URL (When “Use Proxy” is Off)

Streaming Settings

“Connectivity” → “Internet Settings” → “Streaming Settings” → “Create New”

“Profile Name”:	Profile name for streaming (Unique name)
“Proxy Address”:	Proxy address
“Proxy Port Number”:	Port number (1-65535)
“Access Point”:	Access point

Proxy Settings

“Connectivity” → “Internet Settings” → “Proxy Settings” → “Create New”

“Proxy Name”:	Proxy name (Unique name)
“Proxy Address”:	IP address
“Access Point”:	Access point
“Home”:	Home page URL
“Port Number”:	Port number (1-65535)
“Authentication Type”:	Authentication Type (“HTTP-BASIC” or “HTTP-DIGEST”)
“User Name”:	User name for authentication
“Password”:	Password for authentication

APN Settings

“Connectivity” → “Internet Settings” → “APN Settings” → “Create New”

“Access Point Name”:	Access point name (Unique name)
“APN”:	APN setting
“Authentication Type”:	Authentication type (“NONE”, “PAP” or “CHAP”)
“User Name”:	User name for access point
“Password”:	Password for access point
“DNS”:	DNS (Domain Name System)
“Linger Time”:	Linger Time (1-99999 sec.)

Re-Provisioning Settings

“Connectivity” → “Internet Settings” → “Re-Provisioning Settings” → “Execute Pending”

Clearing DNS Cache

“Connectivity” → “Internet Settings” → “Clear DNS Cache”

To Activate the WAP/Streaming Profile

“Connectivity” → **“Internet Settings”**

1. Select “WAP Settings” or “Streaming Settings”.
2. Select the desired profile you wish to activate.

To Edit/Copy/Delete the WAP/Streaming Profile

“Connectivity” → **“Internet Settings”**

1. Select “WAP Settings” or “Streaming Settings”.
2. Highlight the desired profile.
3. Press [Options] and select the desired option.

“Edit”:
“Copy”:
“Delete”:

Modify the desired item
Enter the new file name
Press [Yes] to delete

Off Line Mode (M 12-5)

When the Off Line Mode is set to “On”, the phone cuts off the network connections and stops searching for available networks to connect. With this mode, you can play games or music even when you fly.

“Connectivity” → **“Off Line Mode”**

1. Select “On” or “Off”.

Backup/Restore (M 12-6)

With a memory card inserted in your phone, you can make backup files of Bookmarks, Text, Phonebook, Calendar and Tasks in the handset memory to the memory card. You can also restore the backup data from the memory card.

Making a Backup File on the Memory Card

“Connectivity” → **“Backup/Restore”** → **“Backup”**

1. Enter your handset code.

The default handset code is “9999”. For details on changing the handset code, see “To Change the Handset Code” on page 120.

2. Press [OK].
3. Select the desired item to backup.

To Backup All Files

“Connectivity” → **“Backup/Restore”** → **“Backup”**

1. Enter your handset code.
2. Press [OK].
3. Select “Select All”.

Restoring a Backup File

“Connectivity” → **“Backup/Restore”** → **“Restore”**

1. Enter your handset code.
2. Press [OK].
3. Select the desired item.
4. Select the desired file to restore.
A confirmation message indicating deletion from the memory card is displayed on the screen.
5. Press [Yes].

To Restore All Files

“Connectivity” → **“Backup/Restore”** → **“Restore”**

1. Enter your handset code.
2. Press [OK].
3. Select “Select All”.
A confirmation message indicating deletion from the memory card is displayed on the screen.
4. Press [Yes].

To Delete a Backup File

“Connectivity” → **“Backup/Restore”** → **“Restore”**

1. Enter your handset code.
2. Press [OK].
3. Select the desired item.
4. Highlight the desired file.
5. Press [Options] and select “Delete”.
A confirmation message to delete the selected file is displayed on the screen.
6. Press [Yes].

Connecting WX-T91 to Your PC

You can use the following functions by connecting the WX-T91 to your PC using an infrared port, USB port* or *Bluetooth* wireless technology port:

- 3G/GSM GPRS modem
- Handset Manager for WX-T91
- * Requires an optional USB data cable XN-1DC30 for USB port connection.

System Requirements

Operating System:

Windows[®] 98*, Windows[®] Me,
Windows[®] 2000**, Windows[®] XP***

- * Windows[®] 98 Second Edition, Windows[®] 98 Service Pack 1 with Internet Explorer 5.01 or later
- ** Service Pack 4
- *** Service Pack 1a

Supported Software:

Microsoft[®] Outlook/Outlook Express

Interface:

Infrared port, USB port or *Bluetooth* wireless port

CD-ROM drive

3G/GSM GPRS Modem

You can use WX-T91 as a 3G/GSM GPRS modem to access the Internet from your PC. Connect your phone to your PC via *Bluetooth* wireless technology or USB interface. Software installation on your PC is required. For details, see “Software Installation” on page 133.

Modem via the USB Cable

To use the modem function using a USB cable, use the cable mentioned above and see the instructions accompanying the cable.

Modem via Bluetooth connection

To use the modem function via *Bluetooth* wireless technology interface, see “Using the Bluetooth Wireless Function” on page 124 and turn the modem function on.

For details on software support, refer to the following site:

<http://www.sharp-mobile.com>

Note

- *Modem communication is not possible while communicating with the Handset Manager via Bluetooth wireless technology, infrared or USB interface.*
- *Your phone exhausts the battery when connected to a PC, even when not communicating.*

Handset Manager

You can transmit the following items between your phone and your PC, and can use Phonebook entries on your PC:

- Gallery files (pictures/sounds/video clips/Other Documents data)
- Phonebook entries
- Schedule entries

For details on software support, refer to the following site:

<http://www.sharp-mobile.com>

Software Installation


1. You can download the software for WX-T91 from the FarEasTone website (<http://www.fetnet.net/>) by accessing the Internet. Download and install the software.
2. Press the buttons following the guidance.
The installation starts.
3. Follow the on-screen instructions to complete installation.

Note

- *The phone may not recognise the USB data cable if it is connected while an application (Camera, Gallery, etc.) is running. Connect the USB data cable in standby.*

Infrared communication

- *Infrared ports need to be aligned with each other.*

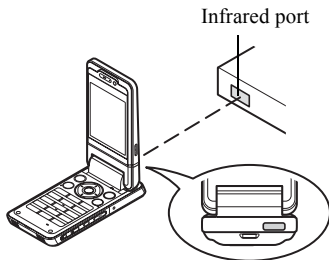

- *Applications (Camera, Gallery, etc.) do not run when the phone is connected to the PC via Bluetooth wireless technology interface, infrared port or USB data cable.*

- *Infrared ports need to be placed within 20 cm of each other and within a 30° angle.*

3G/GSM GPRS modem

- *It is not recommended that you make or answer calls when you are using WX-T91 as a 3G/GSM GPRS modem. The operation may be interrupted.*

Handset Manager

- *Some large files may not be able to be transmitted from the PC to the phone.*

Troubleshooting

Problem	Solution
The phone does not turn on.	<ul style="list-style-type: none">• Make sure the battery is properly inserted and charged.
PIN code or PIN2 code is rejected.	<ul style="list-style-type: none">• Make sure you have entered the correct code (4 to 8 digits).• Your SIM/USIM card/protected functions will become locked after three unsuccessful attempts.• Contact your SIM/USIM provider if you do not have the correct PIN code.
The SIM/USIM card becomes locked.	<ul style="list-style-type: none">• Enter the PUK code (8 digits) provided by your service provider (if supported).• If the attempt is successful, enter the new PIN code and confirm your phone is operational again. Otherwise contact your dealer.
The display is difficult to read.	<ul style="list-style-type: none">• Adjust the backlight brightness for the display.

Problem	Solution
Phone functions do not work after the phone is turned on.	<ul style="list-style-type: none">• Check the radio signal strength indicator as you may be outside the service area.• Check to see if any error message is displayed when you turn your phone on. If so, contact your dealer.• Make sure the SIM/USIM card is correctly inserted.

Problem	Solution
Calls cannot be made or received.	<ul style="list-style-type: none"> • If the message “SIM card error” is displayed when the phone is switched on, you cannot use your SIM/USIM card or the SIM/USIM card is damaged. Contact your dealer or network service provider. • Check your call barring, fixed dialling setting, remaining battery and call forwarding settings. • Check if your phone is currently performing data communication using Infrared (IrDA), <i>Bluetooth</i> wireless technology interface or a USB data cable. • Check the remaining balance if you are using a pre-paid SIM/USIM card.
Call quality is poor.	<ul style="list-style-type: none"> • Your current location may not provide good call quality (i.e., in a car or train). Move to a location where radio signal strength is stronger.
Cannot access network service.	<ul style="list-style-type: none"> • Check where your account has been registered and where the service is available.

Problem	Solution
Cannot send or receive text message.	<ul style="list-style-type: none"> • Make sure you are correctly subscribed for the Short Message Service, that the network supports this service, and that the centre number is set up correctly. If not, contact your network service provider.
Cannot connect to Multimedia Messaging Service provider.	<ul style="list-style-type: none"> • MMS settings and configuration may be missing or incorrect or the network does not support it. Check your service provider’s access point number. Contact your service provider to confirm the correct settings.
Limited memory available.	<ul style="list-style-type: none"> • Delete any unnecessary data.
Call is terminated unexpectedly.	<ul style="list-style-type: none"> • Magnetised objects such as health necklaces placed near the phone may terminate the call. Keep your phone away from such objects.
No entries are displayed in the Phonebook.	<ul style="list-style-type: none"> • Confirm that the Source setting (Handset or SIM/USIM) is made correctly.

Problem	Solution
Fax transmission failure.	<ul style="list-style-type: none">• Before transmitting fax data, configure your fax software to use the software flow control.• Use of the optional data cable is recommended for transmitting fax data.
Cannot receive OBEX data.	<ul style="list-style-type: none">• The OBEX data can only be received in standby.

Safety Precautions and Conditions of Use

Your phone conforms to international regulations insofar as it is used under normal conditions and in accordance with the following instructions.

Conditions of Use

Electromagnetic waves

- Do not switch on your phone aboard an aircraft (as your phone may interfere with the aircraft's electronic systems). Current legislation forbids this use and legal action can be taken against the user.
- Do not switch on your phone in a hospital, except in designated areas.
- Use of your phone's function may affect the performance of medical electronic units (pacemakers, hearing aids, insulin pumps, etc.). When the phone function is on, do not bring it near medical equipment or into areas in which medical equipment is being used. If you have a hearing aid or a pacemaker, only use the phone on the opposite side of your body from where it is located. The phone should be kept at least 6 inches (15.24 cm) from a pacemaker ANYTIME the phone is switched on.

- Do not switch on your phone near gas or flammable substances.
- Observe the rules concerning the use of mobile phones at gasoline stations, chemical plants and at all sites where a risk of explosion exists.

Caring for your phone

- Do not allow children to use your phone without supervision.
- Do not open or attempt to repair your phone yourself. The product can only be repaired by authorised service personnel.
- Do not drop your phone or subject it to severe impacts. Bending the body and pushing the display or keys with extreme force could damage the phone.
- Do not use solvents to clean your phone. Use only a soft, dry cloth.
- Do not carry your phone in your back pocket as it could break when you sit down. The display is made of glass and is particularly fragile.
- Avoid touching the external connector on the underside of the phone, since the delicate components within can be damaged by static electricity.

Battery

- Use your phone only with batteries, chargers and accessories recommended by the manufacturer. The manufacturer disclaims any liability for damage caused by the use of other chargers, batteries or accessories.
- **Network configuration and phone usage will affect talk-time and standby time.**
Using the games or camera will hasten battery consumption.
- **When the battery charging alert is displayed on the screen, charge the battery as soon as possible.**
If you continue using your phone ignoring the alert, the phone may cease to function, and all data and settings you have stored may be lost at any moment.
- Before removing the battery from the phone, make sure the phone is switched off.
- Replace and charge the new battery as soon as possible after removing the old one.
- Do not touch the battery terminals. Batteries can cause damage, injury or burns if a conductive material touches exposed terminals. When the battery is detached from the phone, use a cover made of non-conductive material for keeping and carrying the battery safely.

- Recommended temperature for using and storing batteries is approximately 20°C.
- The batteries' performance is limited in low temperatures, particularly below 0°C and the phone may not work temporarily regardless of the amount of remaining battery power.
- Exposing the phone to extreme temperatures will shorten battery life.
- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE,
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS**

See “Battery Disposal” on page 16.

Aerial Care

- Do not cover the top of the phone (p. 10, No. 21) with your hand when in use as this may interfere with the performance of the built-in aerial. Call quality may deteriorate leading to shortened talk-time and standby time because the mobile phone has to operate on a higher power level than is necessary.
- Use only the aerial supplied or one approved by Sharp for your mobile phone. Using unauthorised or modified aerials may damage the mobile phone. Moreover, since the mobile phone may violate the appropriate regulations, it may lose performance or exceed the limitation of SAR levels.
- To avoid impaired performance, do not damage the aerial of the mobile phone.
- While talking directly to the microphone, please hold the mobile phone so that the aerial is upwards over your shoulder.
- To avoid interfering with blasting operations, please turn off the mobile phone in a blasting area or in a place where a “turn off two-way radio” sign is posted.

Camera Operation

- Learn picture quality, file formats, etc. beforehand. The taken pictures can be saved in JPEG format.
- Be careful not to move your hand while taking pictures.
If the phone moves while taking a picture, the picture can become blurred. When taking a picture, hold the phone firmly to prevent it from moving, or use the delay timer.
- Clean the lens cover before taking a picture. Fingerprints, oils, etc. on the lens cover hinder clear focusing. Wipe them off with a soft cloth before taking a picture.

Others

- As with any electronic storage unit, data may be lost or corrupted under various circumstances.
- Before connecting the phone with a PC or a peripheral unit, read the operation manual for the other unit carefully.
- If the phone’s battery has been removed for some time, or the phone has been reset, the unit’s clock and calendar may be reinitialised. The date and time should be updated in this case.

Environment

- Keep your phone away from extreme heat. Do not leave it on the dashboard of a car or near a heater. Do not leave it in any place that is extremely damp or dusty.
- Since this product is not waterproof, do not use it or store it where fluids such as water can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunctions.

Precautions Concerning Vehicle Use

- It is the user's responsibility to check the local laws governing the use of a mobile phone in vehicles. Pay full attention to driving. Pull off to the side of the road, park the car, and switch off the engine before making or answering a call.
- Use of your phone's function may interfere with the vehicle's electronic systems, such as the ABS anti-lock brakes or the air-bag. To ensure no such problem occurs, please check with your dealer or car manufacturer before connecting your phone.
- Only allow qualified service maintenance personnel to install the vehicle accessories.

The manufacturer disclaims any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.

SAR

Your Sharp mobile phone has been designed, manufactured and tested so as not to exceed the limits for exposure to electromagnetic fields as required by the DGT. These limits are part of comprehensive guidelines developed by independent scientific organisations. The guidelines include a substantial safety margin designed to assure the safety of the phone user and others and to take into account variations in age and health, individual sensitivities and environmental conditions. The DGT rules provide for the amount of radio frequency electromagnetic energy absorbed by the body when using a mobile phone to be measured by reference to the Specific Absorption Rate (SAR). The SAR limit for the general public is currently 1.6 watts per kilogram averaged over 1 gram of body tissue. Your Sharp mobile phone SAR value is 0.794 W/kg. This has been tested to ensure that this limit is not exceeded even when the phone is operating at its highest certified power. In use however your Sharp mobile phone may operate at less than full power because it is designed to use only sufficient power to communicate with the network.

Precautions for Use in USA

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Exposure to Radio Waves

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions specified by the FCC with

the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.355 W/kg and when worn on the body, as described in this user guide, is 0.426 W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the phone. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID APYHRO00041.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://www.phonefacts.net>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Out of Warranty List

This limited warranty shall not apply in respect of the following:

- (i) Any deterioration due to normal wear and tear including all plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (ii) Defects caused by the Product being subjected to any of the following: use in contradiction with the user guide, rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or rapid changes in such conditions, corrosion, oxidation, unauthorised modifications or connections, unauthorised opening or repair, repair by use of unauthorised spare parts, misuse, improper installation, accident, forces of nature, spillage of food or liquid, influence from chemical products or other acts beyond Sharp's reasonable control (including but not limited to lifetime, and breakage of or damage to antennae) unless the defect was caused directly by defects in materials or workmanship.
- (iii) Products in respect of which the product serial number or the IMEI number has been removed, erased, defaced, altered or made illegible.

- (iv) Defects caused by the fact that the Product was used with or connected to a products or an accessory not manufactured or supplied by Sharp or was used other than for its intended use.
- (v) Defects caused by a defective function of the cellular network.
- (vi) Defects caused by the fact that the battery was short-circuited or seals of the battery enclosure or cells were broken or show evidence of tampering or the battery was used in equipment other than for which it has been specified.
- (vii) Defects caused by the need to upgrade Products software due to changes in cellular network parameters.
- (viii) Products operated outside published maximum ratings.
- (ix) Products rented on a monthly basis.

Charger Plug:

Do not use the AC Charger if the plug does not fit the socket.

Index

Symbols

#/Silent Key 12

* /Shift Key 11

A

Alarms 94

 Resetting 95

 Setting 94

Area Info 68

 Enabling/Disabling 68

B

Battery

 Charging 16

 Disposal 16

 Inserting 14

 Removing 15

Battery Cover 12

Battery Level Indicator 17

Bluetooth 124

 Bluetooth Wireless Function
 124

 Bluetooth Wireless Settings 126

Built-in Aerial 12

C

Calculator 96

Calendar 91

 Creating 91

 Deleting 93

 Editing 93

 Receiving 94

 Sending 93

 Viewing a Schedule Entry 92

 Viewing the Memory Status 94

Call Log 122

 Deleting 122

 Sending 122

 Viewing 122

Call Manager 46

 Assigning a Ringtone or a Ring
 Video Clip File 49

 Changing the List 47

 Copying 48

 Creating 47

 Deleting 49

 Dialling 48

 Editing 49

 Finding 47

 Manage Group 50

 Memory Status 51

 Message Groups 50

 Receiving 52

 Saving 47

 Sending a Voice Clip Message
 or Video Clip Message 52

 Sending an Entry 52

 Sorting the List Order 47

 Speed Dial List 51

 Viewing My Card 48

Call Settings 114

 Auto Redial 118

 Call Waiting 115

 Changing the Network
 Password 117

 Displaying Call Timer 118

 Fixed Dialling No. 117

 Minute Minder 118

 Rejecting 117

 Restrict Calls 116

 Voicemail & Diverts 114

Call Timers 122

 Checking the Duration 122

 Resetting 122

Camera (photo/video)

 Adjusting the Exposure 55

 Auto Save 57

 Continuous Shoot 59

 Focus Setting 57

- Picture Effects 58
- Recording Video Clips 54
- Recording with Sound 61
- Saving 56
- Selecting a Frame 60
- Selecting the Picture or Video Quality 56
- Selecting the Picture Size 58
- Selecting the Recording Time 60
- Selecting the Scene 58
- Selecting the Shutter Sound 60
- Shortcut 57
- Switching between the Photo and Video Camera Modes 56
- Taking Pictures 53
- Using the Full Screen 60
- Using the Options Menu in the Viewer Position of the Display 54
- Using the Timer 56
- Using the Zoom Function 55
- Camera Key 13
- Cancel Key 14
- Card Settings 121
 - Formatting Memory Card 121
- Cell Broadcasts 67
 - Enabling/Disabling 67

- Reading 67
 - Setting Languages 67
 - Subscribing 67
- Centre Key 11, 21
- Characters 37
 - Changing the Input Language 38
 - Changing the Input Method 38
 - Chinese User Dictionary 43
 - Copying, Cutting and Pasting Text 45
 - Insert Phonebook Entries 45
 - Stroke mode 42
 - Using Templates 45
- Chinese User Dictionary 43
 - Creating 43
 - Deleting 43
 - Editing 43
- Clear/Back Key 12
- Conditions of Use 138
- Connectivity 124
 - Backup/Restore 130
 - Bluetooth 124
 - Infrared 127
 - Internet Settings 128
 - Network Settings 127
 - Off Line Mode 130
- Countdown Timer 102
 - Editing 102

D

- Data Counter 123
 - Resetting 123
- Date & Time 112
 - Customising the Time Zone 112
 - Displaying Date & Time 113
 - Selecting the Date Format 113
 - Selecting the Time Format 113
 - Setting the Calendar Format 113
 - Setting the Daylight Saving 112
 - Setting the Time Zone 112
- Display
 - Adjusting the Brightness 110
 - Assigning the Pictures 109
 - Backlight 110
 - Setting from Picture Gallery 109
 - Setting the Display Saving 111
 - Setting the Greeting Message 110
 - Wallpaper 109
- Display Indicators 21
- Display Position 23

E

- Earpiece 11
- Earpiece Volume 27
- Emergency Calls 25
- End/Power Key 12

- Expenses Memo 102
 - Editing 103
 - Recording 102
 - Viewing Totals 103
- External Camera 12
- External Connector 14
- F**
- FET Mobile Internet 71
- Functions
 - Navigating 24
- G**
- Gallery 80
 - Common Option Menus 83
 - Memory Status 86
 - Other Documents 83
 - Picture Gallery 80
 - Sound Gallery 82
 - Text Templates 86
 - Video Gallery 81
- H**
- Handset Code 120
- Handset Lock 120
- I**
- Incall Menu (Video Calling) 31
 - Changing the Image of Yourself 31
 - Muting 31
- Switching Images 31
- Turning the Speakers On and Off 32
- Using the Optical Zoom Function 32
- Video Calling Settings 32
- Incall Menu (Voice Call) 27
 - Accessing SMS/MMS Menu 28
 - Call Waiting 28
 - Conference Call 28
 - Earpiece Volume 27
 - Muting 30
 - Putting a Call on Hold 27
 - Turning the Speakers On and Off 27
- Infrared Port 13
- International Calls 25
- J**
- Java™ Gallery 87
 - Deleting 88
 - Downloading 87
 - Executing 87
 - Setting a Screensaver Application 87
 - Setting Network Access 88
 - Viewing Application Information 88
- Java™ Information 90
- Java™ Settings 89
 - Application Volume 89
 - Backlight 89
 - Calls & Alarms 90
 - Vibration 89
- K**
- Keypad 12
- Keypad Lock 20
- L**
- Language Setting 113
- Left Soft Key 11
- M**
- Main Display 11
- Master Reset 121
- Media Player 75
 - Music Player 77
 - TV & Video 75
- Memory Card
 - Inserting 18
 - Removing 18
- Memory Card Slot Cover 14
- Menu 34
- Menu Key 13
- Messages (MMS/SMS/Email)
 - Calling the Phone Number 66
 - Creating 62
 - Downloading 66
 - Email Settings 70

- Forwarding 66
- General Settings 68
- Locking or Unlocking 67
- MMS Settings 70
- Reading 65
- Replying 66
- Sending 65
- Sending Options 64
- SMS Settings 69
- Sorting 67
- Storing the Phone Number 65
- Microphone 10
- Mobile Light 12
- Music Key 12
- Music Player 77
 - Adding a File to the Playlist 79
 - Adding a New Playlist 79
 - Downloading 79
 - Finding 78
 - Playing Back 77

N

- Navigation Keys 11

O

- Organiser 91
 - Alarms 94
 - Calculator 96
 - Calendar 91
 - Countdown Timer 102

- Expenses Memo 102
- Phone Help 103
- Scanner 97
- Stopwatch 99
- Tasks 100
- Voice Recorder 97
- World Clock 101

P

- PC Connection 132
 - 3G/GSM GPRS Modem 132
 - Handset Manager 133
 - Software Installation 133
 - System Requirements 132
- Picture Gallery 80
 - Adjusting the Size 81
 - Downloading 81
 - Editing 81
 - Saving 80
 - Switching the Memory Source 80
 - Using Images as Wallpaper 80
 - Viewing 80
- Power On and Off 19
- Profiles 105
 - Activating 105
 - Assigning a Ring Video Clip File 106
 - Assigning a Ringtone 106

- Keypad Tones 107
- Message Notification 107
- Resetting 105
- Ringer Volume 105
- Vibration 107

R

- Redialling 26
- Right Soft Key 12

S

- Safety Precautions 138
- Scanner 97
 - Creating QR Codes 98
 - Opening a Barcode Picture 98
 - Reading Barcodes 98
 - Scanning Text 99
 - Viewing the Scanned Data 98
- Security 119
 - Changing the PIN2 Code 120
 - Enabling/Disabling the PIN Code 119
 - Function Lock 121
 - Handset Lock 120
 - Showing Secret Data 121
- Send/Redial Key 11
- Set Java™ Wallpaper 88
 - Setting Applications 88
 - Switching On or Off 88
- Side Keys 13

- SIM Application 104
- SIM/USIM Card
 - Inserting 14
 - Removing 15
- Small Light 13
- Sound Gallery 82
 - Playing Back 82
 - Switching the Memory Source 82
 - Using the Sound Files as a Ringtone 82
- Speed Dialling 26
- Stereo Headset Connecting 19
- Stereo Speakers 13
- Stopwatch 99
- Sub Camera (Internal Camera) 11
- T**
- T9 Text Input
 - Using BoPoMoFo input mode 41
 - Using Stroke mode 42
 - Using T9 English Mode 39
- Tasks
 - Creating 100
 - Deleting 101
 - Sending 101
 - Viewing the Memory Status 101
- Troubleshooting 135

- TV & Video 75
 - Adding a File to the Playlist 75
 - Adding a New Playlist 76
 - Downloading 77
 - Editing 76
 - Finding 75
 - Playing Back 75
 - SD VIDEO 77
 - Settings 76
- U**
- Using 41
- V**
- Video Calling 30
 - Answering 30
 - Incall Menu 31
 - Making 30
- Video Calling Key 11
- Video Calling Settings 118
 - Assigning Hold Guidance Picture 119
 - Backlight 119
 - Muting 119
 - Selecting Picture Quality 118
 - Selecting the Camera Picture 118
 - Turning On or Off the Speakers 118

- Video Gallery 81
 - Downloading 82
 - Playing Back 81
 - Using a Video Clip as a Ring Video 82
- VIDEO OUT/Stereo Headset
 - Connector 10
- Video Output 111
- Voice Call 25
 - Answering 26
 - Incall Menu 27
 - Making 25
 - Redialling 26
 - Speed Dialling 26
- Voice Mail Key 11
- Voice Recorder 97
 - Recording 97
 - Saving 97
 - Selecting the Record Time 97
 - Sending 97
- W**
- WAP Browser
 - Browser Options 73
 - Editing Bookmarks 72
 - Main Menu 71
 - Navigating a WAP Page 72
 - Settings 74

World Clock 101

Setting the Daylight Saving 102

Setting the Time Zone 101

English user manual:
Maker: SHARP CORPORATION
Importer: FarEasTone Telecommunications Co., Ltd.
Address: 5F, 468, Ruei Guang Rd., Nei Hu, Taipei Taiwan
Tel: +886 2 8793 5000
www.fetnet.net

FarEasTone mobile customers please dial 888 for customer services